

# Michelangelo

## OVEN

Use and maintenance manual



ML435  
ML635  
ML635L  
ML935



**HEat.  
smART.**  
Partner in Baking. Since 1963





We congratulate you for choosing a product designed and manufactured with cutting-edge technology.

The oven is checked and tested in the Manufacturer's plant before being delivered to the customer.

The "production process check sheet" enclosed with it guarantees that **each** step in the production process, from assembly to packaging, was carefully checked from both the operating and safety standpoints.

Before the installation, read the content of this manual **carefully**: it contains important information regarding product assembly and safety regulations.

## The foundation

Our company was founded in 1963 by the Lorenzo, Luigi and Paolo Cuppone brothers. It immediately specialized in the production of ovens and equipment to prepare and cook pizza. The constant research and experimentation of new equipment that are even now the strength of our company, have led us to design and patent the machinery and ovens that have revolutionized the way pizza is made.

## Technical service

Your Dealer can solve any technical problem regarding use and maintenance.

Do not hesitate to contact him in case of doubt.

CUPPONE since 1963  
CUPPONE S.R.L.  
Via Sile, 36  
31057 Silea (TV) - ITALY  
T +39 0422 361143  
F +39 0422 360993  
info@cuppone.com - www.cuppone.com

<b>INTRODUCTION</b>	<b>3</b>
Technical service.....	3
<b>1 SAFETY INSTRUCTIONS</b>	<b>4</b>
Symbols used in the manual and on the labels applied to the machine .....	5
<b>2 BASIC NOTIONS</b>	<b>6</b>
Knowing your oven .....	6
Preparing to use the oven .....	6
Some piece of advice.....	7
Cooking tables.....	8
<b>3 USING CD MODELS</b>	<b>9</b>
<b>4 USING TS MODELS</b>	<b>13</b>
<b>5 MAINTENANCE AND CLEANING</b>	<b>36</b>
Warnings.....	36
Oven cleaning.....	36
Replacing components.....	38
Oven downtime for prolonged periods .....	40
Disposal at end of life .....	40
<b>6 WARRANTY</b>	<b>41</b>
<b>7 SOMETHING'S NOT WORKING</b>	<b>42</b>





Read this guide carefully before using and maintaining the appliance, and keep it with care in an accessible place for any future consultation by the various operators.

- Moreover, the manual must always accompany the product through its life, even in case of transfer.
- Before performing any maintenance, disconnect the electricity supply.
- Unauthorised actions, tampering or modifications that do not follow the information provided in this manual can cause damages, injuries or fatal accidents and null and void the warranty.
- Use or maintenance that fail to comply with the instructions in this manual may cause damage, injury or fatal accidents.
- The serial plate provides important technical information. This is vital in case of a request for maintenance or repair of the equipment: please do not remove, damage or modify it.
- Some parts of the equipment can reach high temperatures. We advise you to avoid touching surfaces and not to get materials either flammable or sensitive to heat near the appliance.
- Do not rest objects on the oven, above all if built in material sensitive to heat.
- These appliances are intended to be used for commercial applications, for example in restaurant kitchens, canteens, hospitals and commercial companies such as bakeries, butcher shops, etc., but not for the continuous and mass production of food. A use other than the stated one is considered improper, potentially dangerous for people and animals and might permanently damage the appliance. The improper use of the equipment shall void the warranty.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazard involved. Children must not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- To clean the appliance, any of its components or accessories and the sub-structure DO NOT use:
  - abrasive, powder, aggressive or corrosive detergents (e.g. hydrochloric/muriatic or sulphuric acid, caustic soda, etc.)
  - abrasive or sharp tools (e.g. abrasive sponges, scrapers, steel brushes, etc.);
  - steamed or pressurised water jets.
- The staff using the appliance must be professionally prepared and periodically trained on its use, as well as the safety and accident prevention regulations.
- Children must be supervised to make sure they do not play with the appliance or parts of it.
- Always use tools resistant to heat (e.g. In steel). Cooking utensils in plastic or similar material might not withstand the oven high temperatures.
- Check regularly that fumes can be discharged safely. Do not obstruct the duct for any reason.
- FIRE RISK: leave the area around the appliance free and clean from fuels. Do not store flammable materials near this appliance.
- WARNING: RISK OF EXPLOSION! It is forbidden to use the oven in environments at risk of explosion.
- WARNING: always switch off the main switch when you finish using the appliance, above all during cleaning or in cases of prolonged downtime.
- If you notice any anomaly (e.g. damaged power cable, etc.), malfunction or fault, do not use the appliance and contact a Service Centre authorized by the Manufacturer. Demand original spare parts, or the Warranty will be null and void.
- Place the emergency phone numbers in a visible location.
- WARNING: it is forbidden to place flammable solids or liquids (spirits for instance) in the cooking chamber during the operation.
- Monitor the appliance during its entire operation, do not leave dishes in the oven unattended!
- Failure to follow these regulations may cause damage or even fatal injury, subsequently invalidating the guarantee and relieving the Manufacturer of all liability.
- We recommend you have the appliance checked by an Authorized Service Centre at least once a year.



## Symbols used in the manual and on the labels applied to the machine



Indicates that caution is required when performing an operation described in a paragraph that bears this symbol. The symbol also indicates that maximum operator awareness is required in order to avoid unwanted or dangerous consequences



Indicates that the surfaces marked with this symbol may be hot and must therefore be touched carefully



Dangerous voltage



Risk of explosion



Reference to another chapter where the subject is dealt with in more detail.



Manufacturer's tip



Manufacturer's warning



Indicates that it is necessary to read carefully the paragraph marked with this symbol before installing, using and maintaining the equipment

The company cannot be held liable for any print or transcription errors, reserving the right to make changes where deemed suitable without prior notice.

Partial reproduction without the Manufacturer's consent is prohibited. Measurements are purely indicative and not binding. The original language used to prepare this manual is English: the Manufacturer is not responsible for any translation/interpretation or print errors.



## 2 BASIC NOTIONS

### Knowing your oven

#### ► Fig.1

Your oven can be used only to bake pizzas or similar dishes, such as bread or focaccia and to grill vegetables.

Its main parts are:

- 1 Cooking chamber in stainless steel
- 2 Chimney to vent any cooking fumes
- 3 Cooking surface in refractory bricks
- 4 Power cable inlet
- 5 Face in stainless steel
- 6 Control display
- 7 Electrical compartment ventilation slots: keep them always clean and clear.

The temperature in the chamber is controlled by boards that switch the heating elements on and off to keep the set temperature constant.

The oven can manage separately the powers:

- of the bottom part of the oven chamber;
- of the top part of the oven chamber.

### Preparing to use the oven

Clean the oven and any accessories accurately, both externally and internally, following the instructions in the dedicated chapter rigorously.



**Maintenance and cleaning** - page 36.

**On first switch-on**, set the temperature to **150 °C - 302 °F**, for the "TS" model, 80% top percentage, 20% bottom, for the "CD" model, set **MAX** for the top and **MIN** for the bottom, for at least **8 hours, without any food inside**. During this time, keep the chimney flue fully open. If a hood is fitted, we recommend it is kept ON. In this first phase, because of the humidity evaporating from the insulating materials, the oven will give out unpleasant smells and fumes that will gradually disappear during the following operating cycles.

To switch the oven on and set its parameters, refer to:



**Using CD models** - page 9

**Using TS models** - page 13

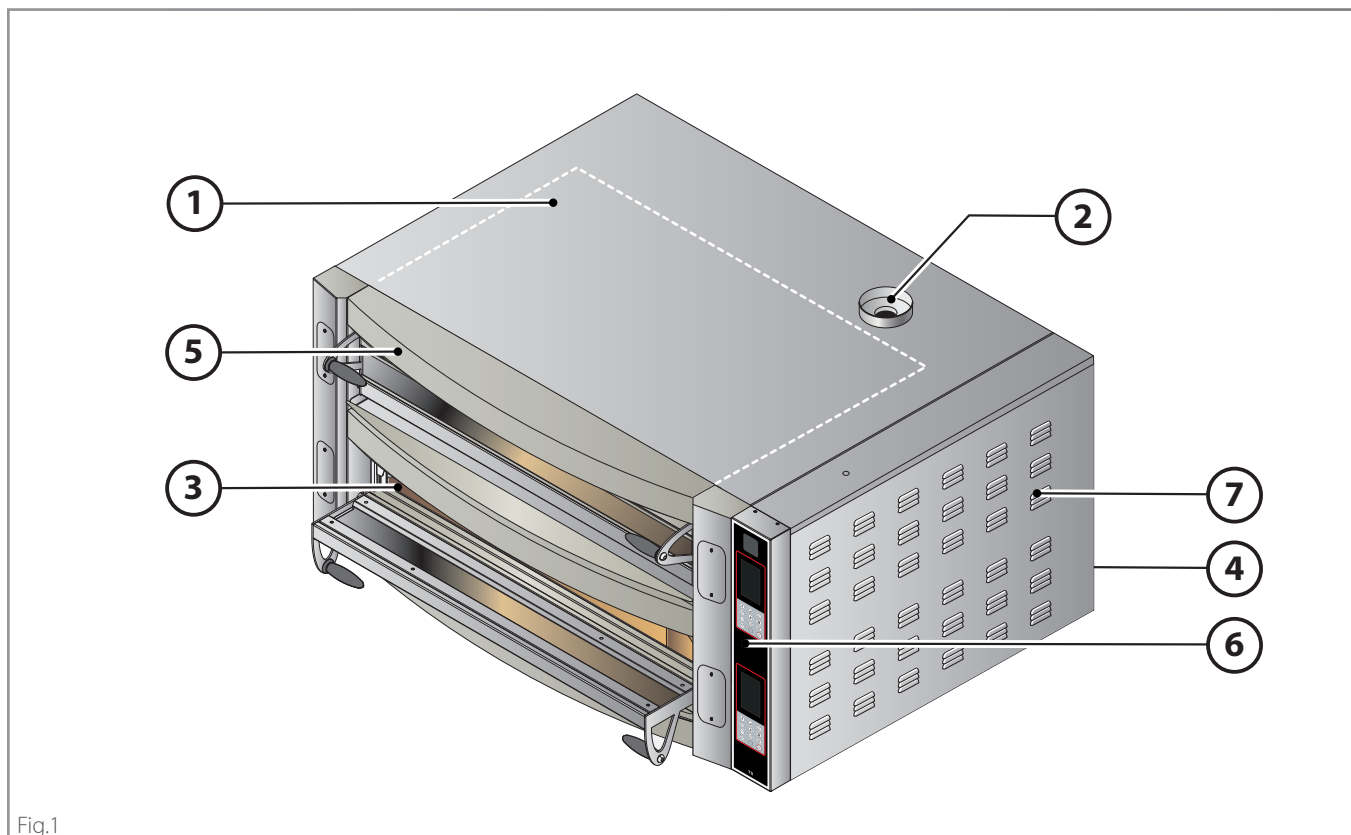


Fig.1



**The first day of use is considered as a running-in period: during this time the refractory bricks and insulating material keep releasing humidity until they dry out completely.**



**Some parts of the equipment can reach high temperatures. We advise you to avoid touching surfaces and not to get materials either flammable or sensitive to heat near the appliance.  
Do not rest objects on the oven, above all if built in material sensitive to heat.  
Take care and use personal protection equipment (i.e. gloves) when putting food into the cooking chamber or getting it out.**

## Some piece of advice...

- Before starting cooking, always preheat the oven: this is vital to get good food. Preheating the oven **must last at least an hour**, it is therefore always preferable to use the programmed switch-on function so that the oven is already hot when the place opens and ready to cook the desired food.



Programmed switch-on mod. CD: page [12](#)

Programmed switch-on mod. TS: page [26](#)

- During work, keep the refractory surfaces clean using a stiff bristle brush
- Passing from a type of pizza to another, wait for the oven to stabilize
- Take your time when adjusting the cooking parameters according to the increase and/or decrease in the workload
- An excess of flour in the cooking chamber can create smoke, smell and give the pizza an unpleasant taste
- Clean the oven at the end of service

## WHAT IS PIZZAFORM?

Pizzaform is a Manufacturer's patent. It is a special press, produced in five models, to make pizza dough discs up to Ø52 mm [Ø20.47 in.].

Its main features are:

- high hourly output, up to 400 pizzas an hour, without using specialized labour;
- consistent shape and thickness of the disc of dough, without giving up the traditional edge, obtained thanks to the special shape of the chrome plates;
- possibility of changing the thickness of the dough discs easily.



### ► Fig.2

In the ovens, products cook thanks to the combined action of:

- **radiation**: the heat and infrared rays produced by the top elements make products crunchy and golden  
► this parameter is controlled by the percentage (mod. TS) / setting (mod. CD) of the TOP.
- **convection**: the hot air that circulates in the chamber cooks the product evenly  
► this parameter is controlled by the temperature setting in the chamber
- **conduction**: the bottom elements heat the refractory surfaces on which the products lie  
► this parameter is controlled by the percentage (mod. TS) / setting (mod. CD) of the BOTTOM.

## UNSATISFACTORY COOKING RESULTS

If the cooking results are not as expected, try and check the following:

- **incorrect oven parameters:**
  - temperature in the chamber either too high or too low
  - percentages/settings of the BOTTOM or TOP either too high or too low
- **incorrect preheating:**
  - preheating is vital to get superb results right from the first pizza
  - in preheating, the percentage (mod. TS) / setting (mod. CD) of the TOP has been set too high: the refractory surfaces (without pizzas) have become too hot and burnt the first pizzas
- **incorrect use of the steam holes in the chamber:**
  - in the back of the cooking chamber, there are some steam holes that must be opened or closed according to the type of product to cook: for instance, if they are not opened, there may be too much humidity in the chamber that prevents the infrared rays of the top elements from browning the surface of the products.

Fig.2

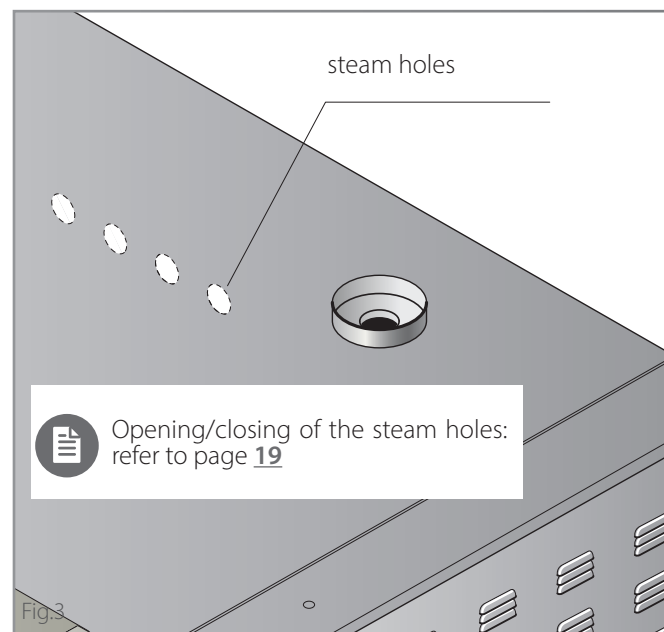
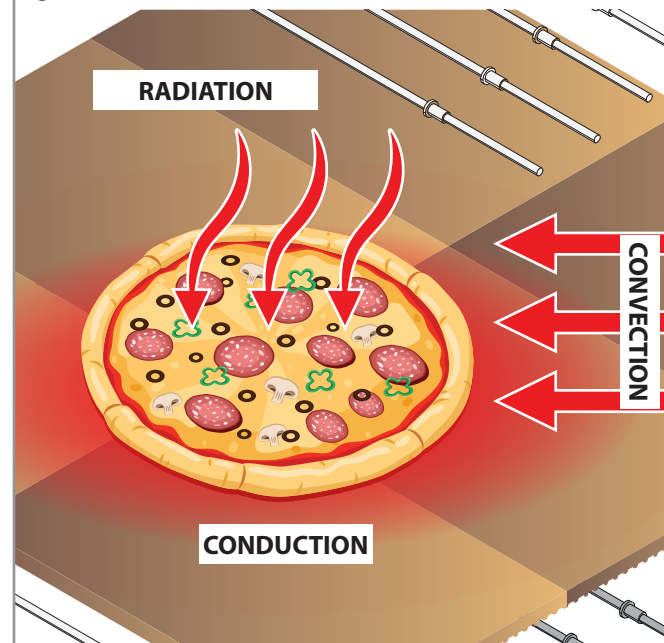


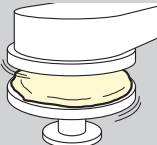




Fig.3

# Basic notions

## COOKING TABLES

 The parameters in the tables are just indicative, since they can vary according to the quantity of work and type of dough to bake (e.g. type of flour, hydration, etc.).

TS CONTROL PANEL		 Manual stretching				 Stretching with Pizzaform				Preheating for both types (Manual stretching or stretching with Pizzaform)	
TYPE	COOKING					COOKING					
	TIME	TEMP.	% TOP	% BOTTOM	TIME	TEMP.	% TOP	% BOTTOM			
TS	CLASSIC (35 cm)		3 min.	320 °C - 608 °F	90%	5%	3 min.	320 °C - 608 °F	80%	0%	time: 1 hour (it may vary according to the percentages set and according to the temperature of the room where the oven is installed)  temperature or percentage: the same as the type of pizza   <b>During preheating, the steam holes in the back of the cooking chamber must be kept always closed, to prevent the elements from being on too long and warming the refractory surfaces too much, causing the first pizzas to burn. Once the set temperature has been reached, open the outlet holes, depending on the product to be made. If the oven remains in stand-by, keep the steam outlet holes open to avoid heat build-up on the stone.</b>
	CLASSIC (50 cm)		4 min.	320 °C - 608 °F	90%	5%	4 min.	320 °C - 608 °F	80%	0%	
	PAN		3 min. 30 sec.	280 °C - 536 °F	60%	40%					
	NEAPOLITAN		90 sec.	360 °C - 680 °F	90%	5%					
	BAKING-TIN	precooking	5 min.	280 °C - 536 °F	60%	40%					
		finishing	4 min.	280 °C - 536 °F	40%	60%					
	PADDLE	PRECOOKING	5 min.	280 °C - 536 °F	70%	20%					
		FINISHING	5 min.	270 °C - 518 °F	60%	20%					

CD	CLASSIC (35 cm)		3 min.	320 °C - 608 °F	MAX	OFF/MIN	3 min	320 °C - 608 °F	MAX	OFF	time: 1 hour (it may vary according to the percentages set and according to the temperature of the room where the oven is installed)  temperature or percentage: the same as the type of pizza   <b>During preheating, the steam holes in the back of the cooking chamber must be kept always closed, to prevent the elements from being on too long and warming the refractory surfaces too much, causing the first pizzas to burn. Once the set temperature has been reached, open the outlet holes, depending on the product to be made. If the oven remains in stand-by, keep the steam outlet holes open to avoid heat build-up on the stone.</b>
	CLASSIC (50 cm)		4 min.	320 °C - 608 °F	MAX	OFF/MIN	4 min	320 °C - 608 °F	MAX	OFF	
	PAN		3 min. 30 sec.	280 °C - 536 °F	MIN	MAX					
	NEAPOLITAN		90 sec.	360 °C - 680 °F	MAX	OFF					
	BAKING-TIN	precooking	5 min.	280 °C - 536 °F	MIN	MAX					
		finishing	4 min.	280 °C - 536 °F	MIN	MAX					
	PADDLE	PRECOOKING	5 min.	280 °C - 536 °F	MIN	MAX					
		FINISHING	5 min.	270 °C - 518 °F	MIN	MAX					

## Contents of CD models

Knowing the control panel.....	9
Use guided procedure.....	10
A - Turning the oven on manually.....	10
B - Setting the preheating .....	10
C - Starting cooking.....	11
D - Switching the light on (optional).....	11
E - Adjusting the steam holes.....	11
F - Activating an end-of-cooking signal (buzzer).....	11
G - Switching the oven off.....	12
Programmed switch-on.....	12

## Knowing the control panel

### ► Fig.4

#### 1 Main display

Displays alternatively:

- the current temperature in the chamber
- the set temperature
- the intervention time of the end-of-cooking sound warning
- the countdown time (time to the oven switching on if programmed switch-on is used)

#### 2 + and - keys

Allow increasing or decreasing:

- the temperature values in the chamber,
- the intervention time of the end-of-cooking sound warning
- the countdown time (time to the oven switching on if programmed switch-on is used)

#### 3 Element LED: with the oven running, if on, this indicates that the elements are heating; with the oven off, if flashing, it indicates a countdown (timed switch-on active)

#### 4 Top power control

Allows checking the power of the elements in the top, offering three adjustments:

- OFF
- MIN = 33%
- MAX = 100%

#### 4A top LEDs: highlight the selection made

#### 5 Bottom power control

Allows controlling the power of the elements in the bottom, offering three adjustments:

- OFF
- MIN = 33%
- MAX = 100%

#### 5A Bottom LEDs: highlight the selection made

#### 6 ON/OFF switch

Switches the display on and off

#### 7 LIGHT key

Switches the light in the cooking chamber on and off

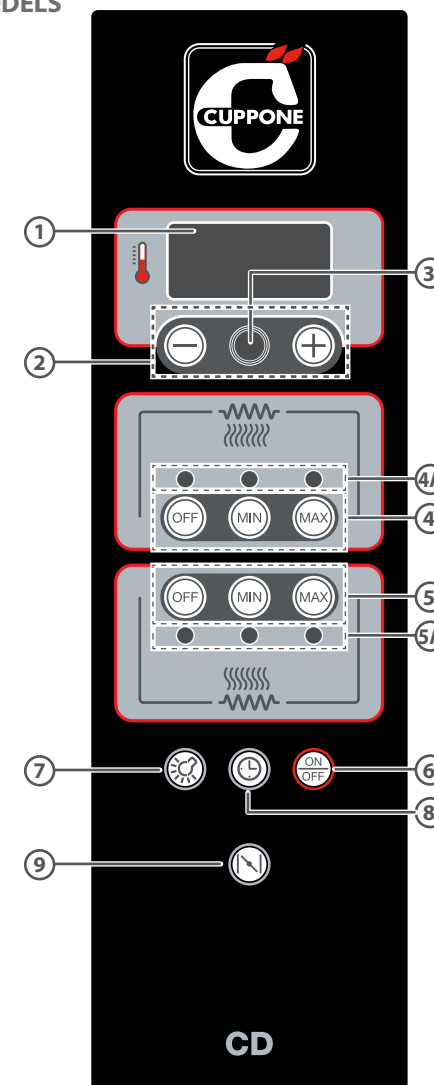
#### 8 CLOCK key

With the oven on: activates an end-of-cooking acoustic signal  
With the oven off: sets the programmed switch-on

#### 9 CHIMNEY key

Opens and closes the steam holes in the back of the cooking chamber

### CD MODELS



**!** The control panel must be used only with dry and clean fingers.

Continuous and prolonged pressing of the (2) + or - keys increases or decreases the value quicker.

Fig.4

## Use guided procedure

The oven can be switched on:

<b>MANUAL</b>	switching the oven on when it must be used; it is necessary to wait at least an hour for the oven to preheat and reach the right temperature	check the following use procedure (points <b>A</b> , <b>B</b> , <b>C</b> , etc.)
<b>PROGRAMMED</b>	programming the oven switching on and off automatically for the whole	see page <b>12</b>
<b>AUTOMATIC</b>	with a clock or SMS (with external modules not supplied by the Manufacturer).	check the documentation accompanying the purchased product

### **A** TURNING THE OVEN ON MANUALLY

► **Fig.5**

Pressing the **ON/OFF**  key, the display lights up and shows the current temperature of the cooking chamber (e.g. 25 °C - 77 °F).

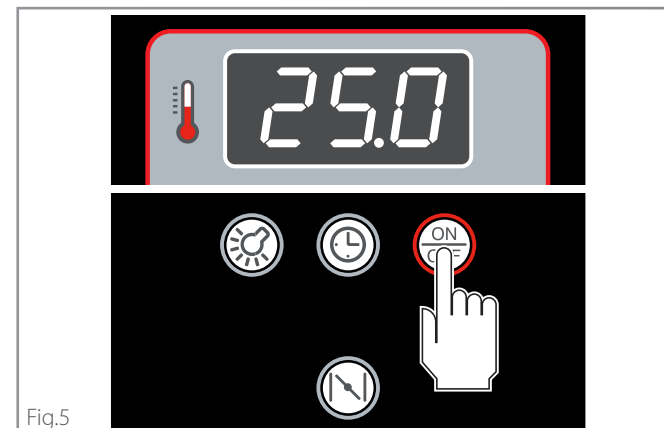


Fig.5

### **B** SETTING THE PREHEATING

Preheating must have the same cooking parameters as the recipe to be used (see table **COOKING INFORMATION** on page **8**, **PREHEATING** column). It must be carried out without products in the cooking chamber and takes about an hour for the oven to be ready for cooking.

**!** During preheating, the flue gas discharge valve must always be kept closed to prevent heat escaping from the chamber and the heating elements being turned on with the consequent overheating of the refractory surfaces which would cause the products to burn.

► **Fig.6**

Set the **preheating temperature** using the + or - keys until the desired value is displayed.

► **Fig.7**

Set the **top** and **bottom power** acting on the keys shown in the figure. After setting these three parameters, the oven starts heating straight away.

**!** The **ELEMENTS** led will switch off after about one hour: this means the oven has reached the temperature set for preheating and is ready for cooking.

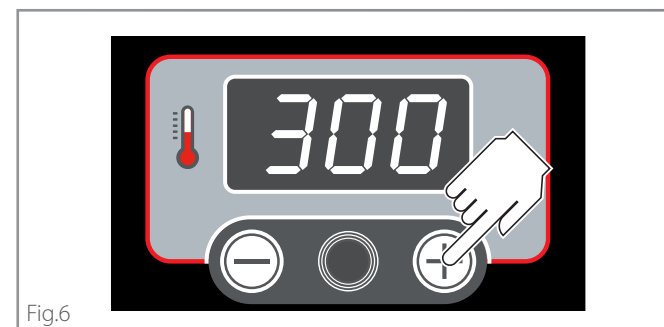


Fig.6

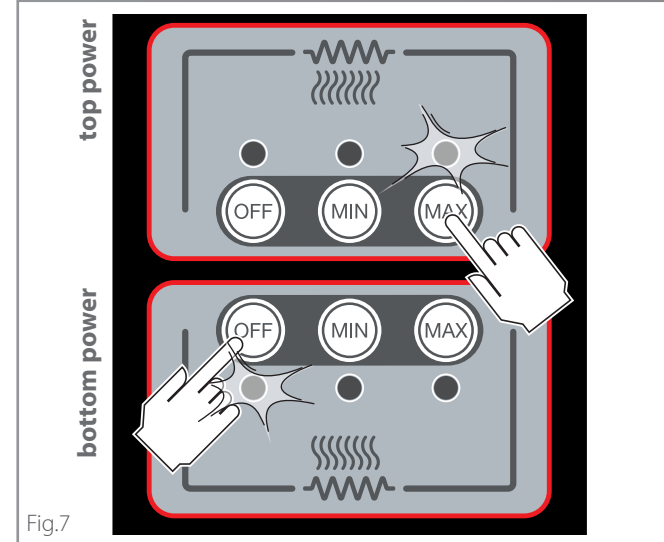


Fig.7



## C STARTING COOKING

► Fig.8

Once preheating is complete, you can start cooking and bake the products using personal protection equipment (e.g. gloves) and tools suitable for contact with food and made of material resistant to high temperatures (e.g. steel).




*For optimal results, always adhere to the oven capacity declared by the Manufacturer and position the products to be cooked evenly in the cooking chamber.*

During cooking, it is always possible to change any value by acting as usual.



**During cooking, the ELEMENT led may switch back on; this means the elements have come back on to keep the set temperature constant.**

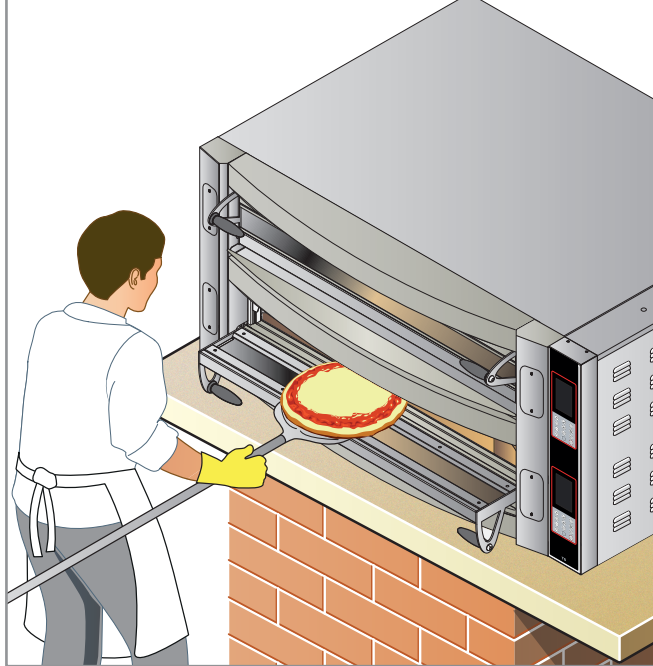Fig.8




## D SWITCHING THE LIGHT ON (OPTIONAL)

► Fig.9

When necessary, it is possible to switch on the oven light to check the cooking, acting on the **LIGHT** key. Press the same key to switch it off.

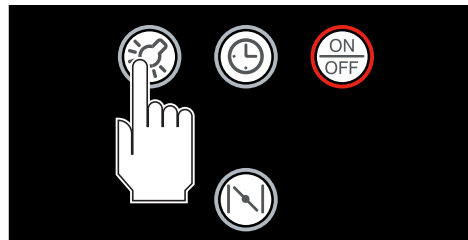Fig.9




## E ADJUSTING THE STEAM HOLES

► Fig.10

In the back of the cooking chamber there are some steam holes: they can be more or less open to keep the degree of humidity more suited to the type of product to bake in the cooking chamber.

To open the holes, keep the button indicated in the figure pressed continuously; they begin to open progressively. To block them in the desired position, just release the key.

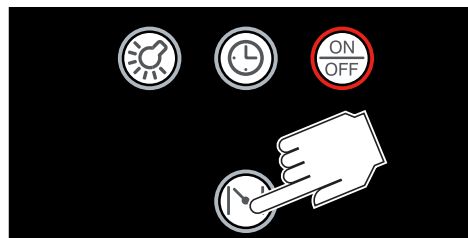Fig.10



## F ACTIVATING A TIMER

► Fig.11

If you wish, you can enable a buzzer that will go off when the set time expires.

To activate it, **with the oven on**, press the **CLOCK** key.

The display will show **after how long the buzzer will go off** (e.g. 3.3 that is three minutes and thirty seconds): if you wish to change this default time, use the **+** or **-** keys until the desired time is displayed (e.g. 5.2 that is five minutes and twenty seconds). After setting it, the countdown starts, at the end of which a buzzer will sound to highlight the end of cooking.

To stop the buzzer, press the **CLOCK** key.



**Warning: the oven continues heating when the buzzer goes off!**

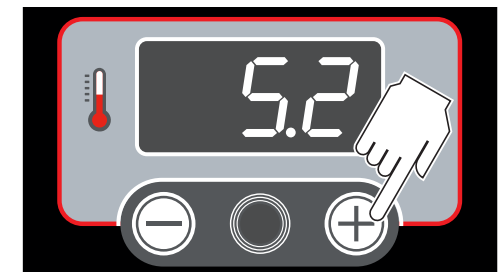


Fig.11

## **G** Switching the oven off

► Fig.12

To switch the oven off, keep the **ON/OFF**  key pressed for about 2 seconds.



**Careful, when the oven is in stand-by it is still live!**

## Programmed switch-on





*The programmed switch-on function is very useful because the oven can be already hot, and therefore ready to bake, when the restaurant is opened.*

► Fig.13

To activate it, **with the oven off**, press the **CLOCK** key. The display will show **the time to switch-on**: if you wish to change this default time, use the **+** or **-** keys until the display shows the desired time (maximum time 99.5 that is 99 hours and 50 minutes).

Once set, the countdown starts, at the end of which the oven will switch on automatically with the temperature and power parameters used **for the last cooking**.

If you wish to change them:

- Exit programmed switch-on pressing the **CLOCK** key.
- Switch the oven on with the **ON/OFF**  key.
- Set a cooking cycle with the desired parameters (► **Fig.6 - Fig.7**).
- Switch the oven off with the **ON/OFF**  key.
- Set the programmed switch-on as explained above.

To exit the function and cancel programmed switch-on, touch the **CLOCK** key again.

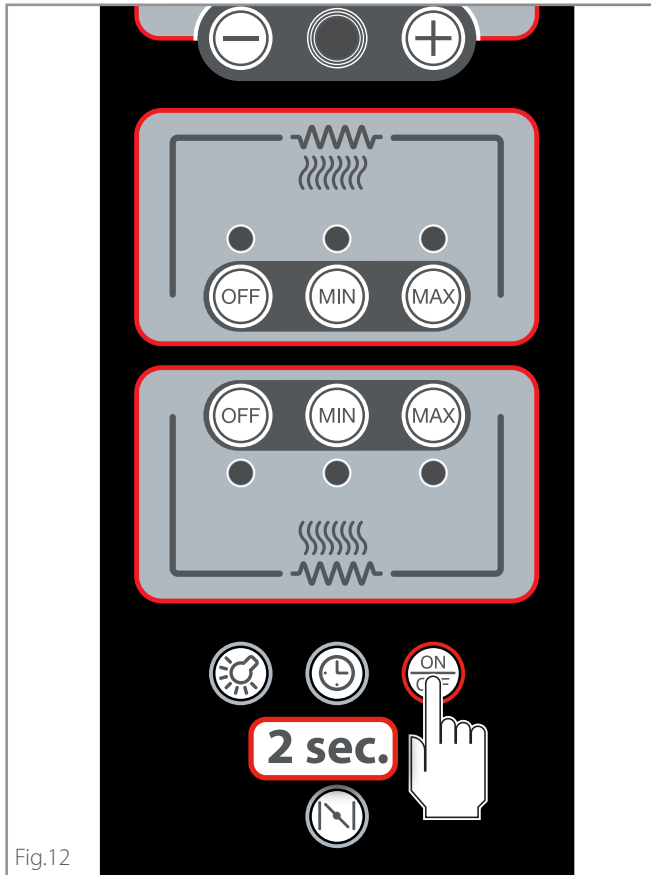


Fig.12

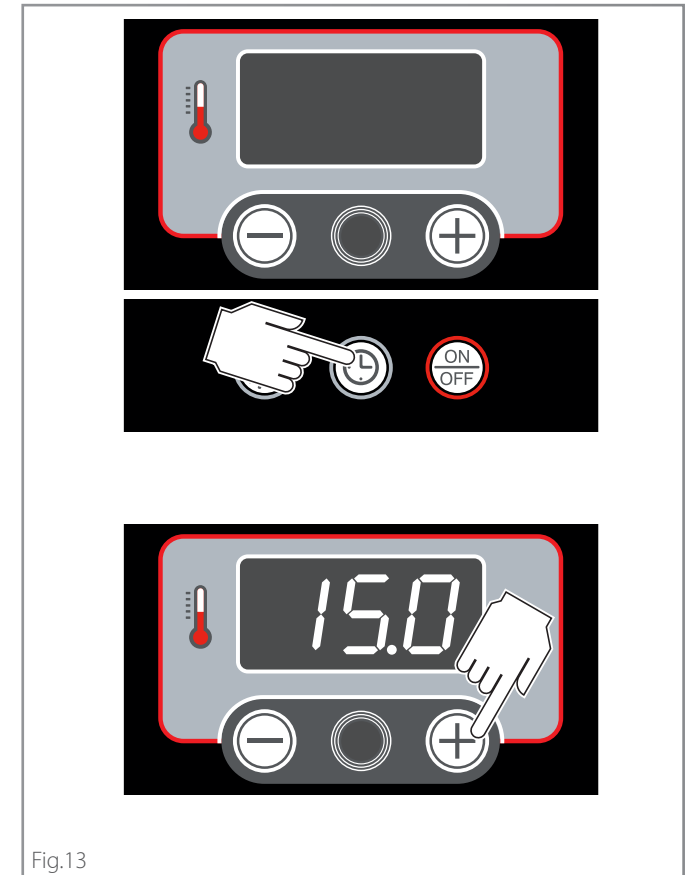


Fig.13

## Contents of TS models

Knowing the control panel.....	13
Entering the values.....	14
Use guided procedure.....	15
A - Turning on or off the oven manually.....	15
B - Setting the preheating .....	15
Special functions: Multi selection .....	18
C - Starting cooking.....	19
D - Switching the light on (optional).....	19
E - Adjusting the steam holes.....	19
F - Activating timers.....	20
Using the recipes.....	21
Using an already stored recipe .....	21
Creating/saving a recipe .....	22
Modifying a stored recipe.....	23
Eliminating a stored recipe.....	23
Duplicating a stored recipe .....	23
Special programs: MAX and ECO .....	24-25
Programmed switch-on.....	26
Setting a program .....	26
Cancelling a weekly porogram .....	27
Cancelling an event .....	28
Modifying an event .....	28
Setting a Diary.....	29
Setting a Holiday .....	30
Settings.....	31

## Knowing the control panel

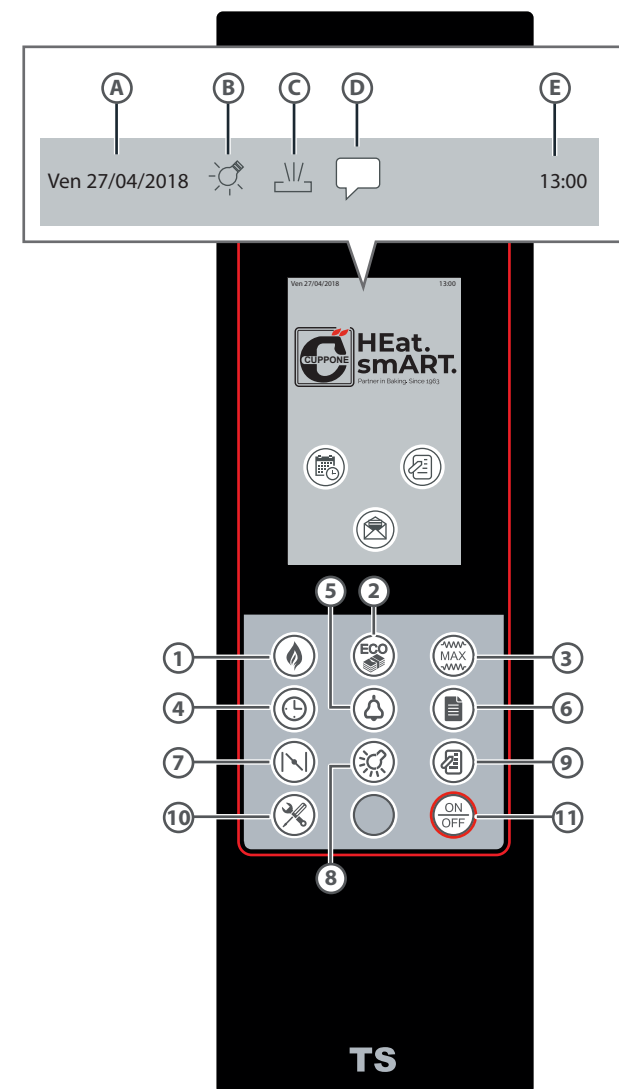
► Fig.14

- PYROLYSIS program key**  
Starts the pyrolysis program to clean the oven
- ECO program key**  
Starts the ECO program (page 25)
- MAX program key**  
Starts the MAX program (page 24)
- TIMER key**  
Stand-by screen: enables the holiday mode;  
Work screen: enables/disables the weekly switch-on timer function.
- BUZZER key**  
Activates an end-of-cooking acoustic signal
- PROGRAM key**  
Allows viewing and using the programs saved by the user
- CHIMNEY key**  
Opens and closes the steam holes in the back of the cooking chamber
- LIGHT key**  
switches the light in the cooking chamber on and off
- AGENDA key**  
Gives access to the diary page
- SERVICE (settings) key**  
Gives access to the user's settings
- ON/OFF switch**  
Powering the oven on and off

### FUNCTION BAR


- Current date**
- Chamber light**  
Shows the state of the light in the chamber (on or off)
- Vent**  
If on, it shows the chimney is opening (the user is acting on the **CHIMNEY** 7 key)
- Warning**  
Highlights a warning to read (e.g. maintenance)
- Current time**

### TS MODELS




**!** The control panel must be used only with dry and clean fingers.

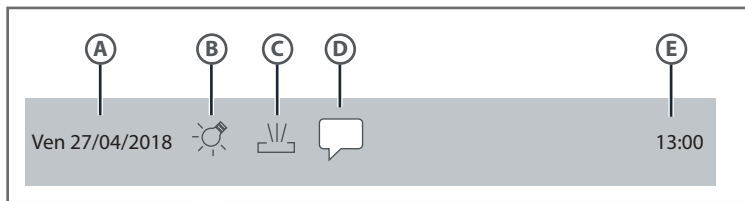Fig.14



FUNCTION BAR

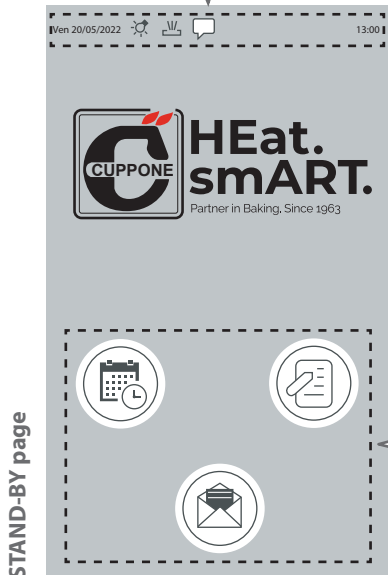

## PROGRAMMED SWITCH-ON key

Gives access to the **WEEKLY PROGRAMMED SWITCH-ON** page: it is possible to program the oven automatically switching on and off for the whole week.



## HOLIDAY key

Gives access to the **HOLIDAY** page: this function allows interrupting for a certain period of time the oven switching on and off every week, without having to cancel it.



## AGENDA key

Gives access to the **DIARY** page, where it is possible to set up to 10 notes that will be displayed at the set time on the set day. Every note can also be repeated cyclically.



## TO ENTER THE VALUES:

- **A1** enter the desired value using the **number keys** (e.g. if 1-1-0 is pressed in sequence, 01:10 is displayed, that is one minute and 10 seconds)  
or, alternatively
- **A2** use the **+** or **-** keys: pressing once increases the value by one unit at a time, prolonged pressing increases the value very quickly.

**B** In both cases, confirm with or delete with **CE**.

## IS THE OVEN TIME OR DATE WRONG?

On first switch-on or after a sudden or prolonged switch-off period, the oven date or time may be wrong: go to **SETTINGS** to enter the correct values.



See page **31**



## Use guided procedure

The oven can be switched on:

<b>MANUAL</b>	switching the oven on when it must be used; it is necessary to wait at least an hour for the oven to preheat and reach the right temperature	check the following use procedure (points <b>A</b> , <b>B</b> , <b>C</b> , etc.)
<b>PROGRAMMED</b>	programming the oven switching on and off automatically for the whole	see page <b>26</b>
<b>AUTOMATIC</b>	with a clock or SMS (with external modules not supplied by the Manufacturer).	check the documentation accompanying the purchased product

### **A** TURNING ON OR OFF THE OVEN MANUALLY

► **Fig.15**

After powering the oven, the display lights up and shows the **STAND-BY** page.

Pressing the **ON/OFF**  key the display shows the **COOKING** page (the oven always starts with the last program used before switching off).

To bring the oven back to stand-by, press the **ON/OFF**  key again.



**Careful, when the oven is in stand-by it is still live!**

### **B** SETTING THE PREHEATING

Preheating must have the same cooking parameters as the recipe to be used. It must be carried out without products in the cooking chamber and takes about an hour for the oven to be ready for cooking.

It is possible to set the preheating in two ways:

- **Fig.16 entering manually the parameters** (preheating temperature and top and bottom power). For some tips, see the **COOKING INFORMATION** table on page **8**, **PREHEATING** column. The entered parameters cannot be stored, so they need to be reset every time. To avoid this operation it is necessary to **save** the manually set recipe (page **16**) or **create** one (page **22**).
- **Fig.18 starting an already stored recipe**, previously saved by the user.



**During preheating, the steam holes in the back of the cooking chamber must be kept always closed, to prevent the elements from being on too long and warming the refractory surfaces too much, causing the first pizzas to burn.**

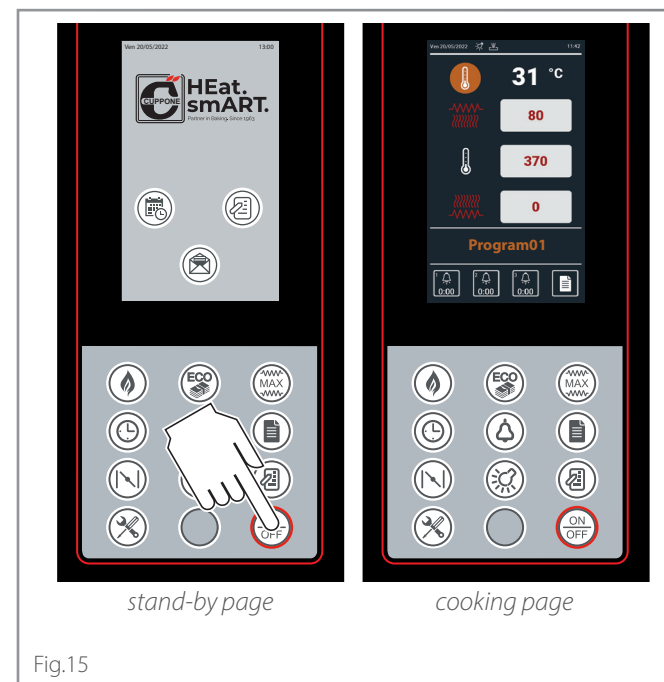



Fig.15

## ENTERING PARAMETERS MANUALLY

► Fig.16

- ① Touch the corresponding field and set:
  - the **cooking chamber temperature**,
  - the **top power**,
  - the **bottom power**
- ② An alphanumeric keypad will open on which it is possible to set the desired value (it is possible to enter the desired values by using the “-” and “+” keys or by setting the value using the numeric keypad). For some tips, see the **COOKING INFORMATION** table on page 8)
- ③ Confirm with  or delete with **CE**.

After setting these three parameters, the oven starts heating straight away in compliance with the set parameters.

During cooking or preheating, if the current temperature in the chamber is:

- **lower** than the one set (so the elements are active), ► the icons identifying the top and bottom are **red**
- **equal to** or **higher** than the set one (so the elements are off), ► the icons identifying the top and bottom are **white**

top power

preheating or cooking temperature

bottom power

end-of-cooking signal (optional)

 See page 20

multiselection

 See page 18




Fig.16


## SAVING THE SET PARAMETERS

► Fig.17

If you wish to save the settings made:


- ① Press the **DISC**  key.
- ② Select whether to **overwrite** the recipe or **save** a copy. If your choice was:

②A <b>OVERWRITE</b>	the recipe <u>Program01</u> will be saved with the set parameters
②B <b>SAVE A COPY</b>	the recipe <u>Program01</u> will keep the original default parameters and a copy will be created, <u>Program01*</u> which will be saved with the new set parameters

- ③ Enter the name of the new recipe.
- ④ Confirm with .

To view and start the saved recipes, follow the explanations in ► Fig.18.

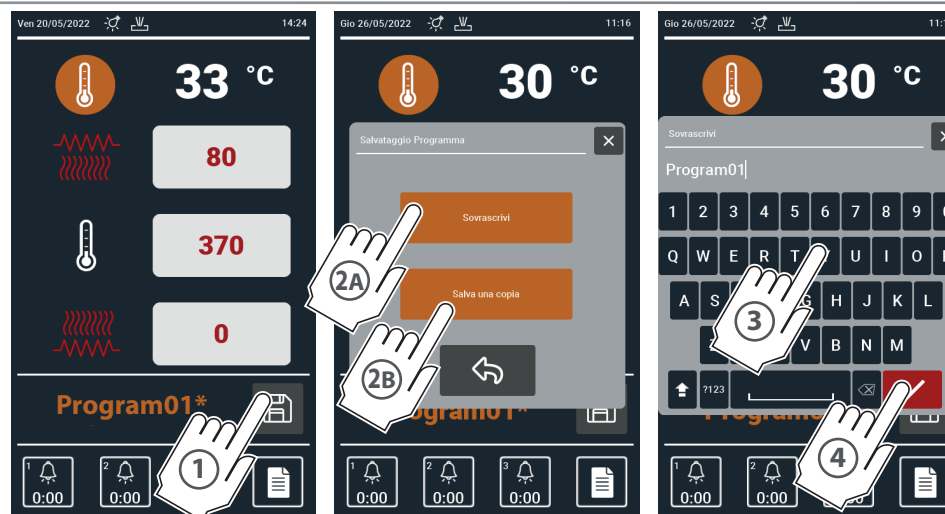Fig.17



## WHY SAVING A RECIPE?

To have available a real customized recipe book, easy to access and use. Using an already stored recipe means being able to start cooking with just a few actions, without having to reset the cooking parameters every time: this guarantees maximum functionality and consistent results.



## USING AN ALREADY STORED RECIPE


► Fig.18

- ① Press the **PROGRAM** (1A) key in the display or keypad (1B) or touch (1C)
- ② The list of the available recipes is displayed: touch the **NAME OF THE RECIPE** you wish to use (e.g. Neapolitan): the oven starts to heat with the relative parameters.
- ③...⑤ If you wish, you can change the parameters of the selected recipe (e.g. the temperature) as explained in the previous chapter: the changes will affect **only the cooking/preheating in progress** and will not affect the original recipe (temporary effect).

If you wish to modify the recipe permanently, you can do it in two ways:

- See page 22 to change the recipe from the **PROGRAM MANAGEMENT** menu.

- Carry out the operations described in ► Fig.19

- ① press the **DISC**  key.
- ② select whether to **overwrite** the recipe or **save** a copy. If your choice was:

②A <b>OVERWRITE</b>	the recipe <u>Neapolitan</u> will be saved with the set parameters
②B <b>SAVE A COPY</b>	the recipe <u>Neapolitan</u> will keep the original default parameters and a copy will be created, <u>Neapolitan*</u> which will be saved with the new set parameters

- ③ Enter the name of the new recipe.
- ④ Confirm with .

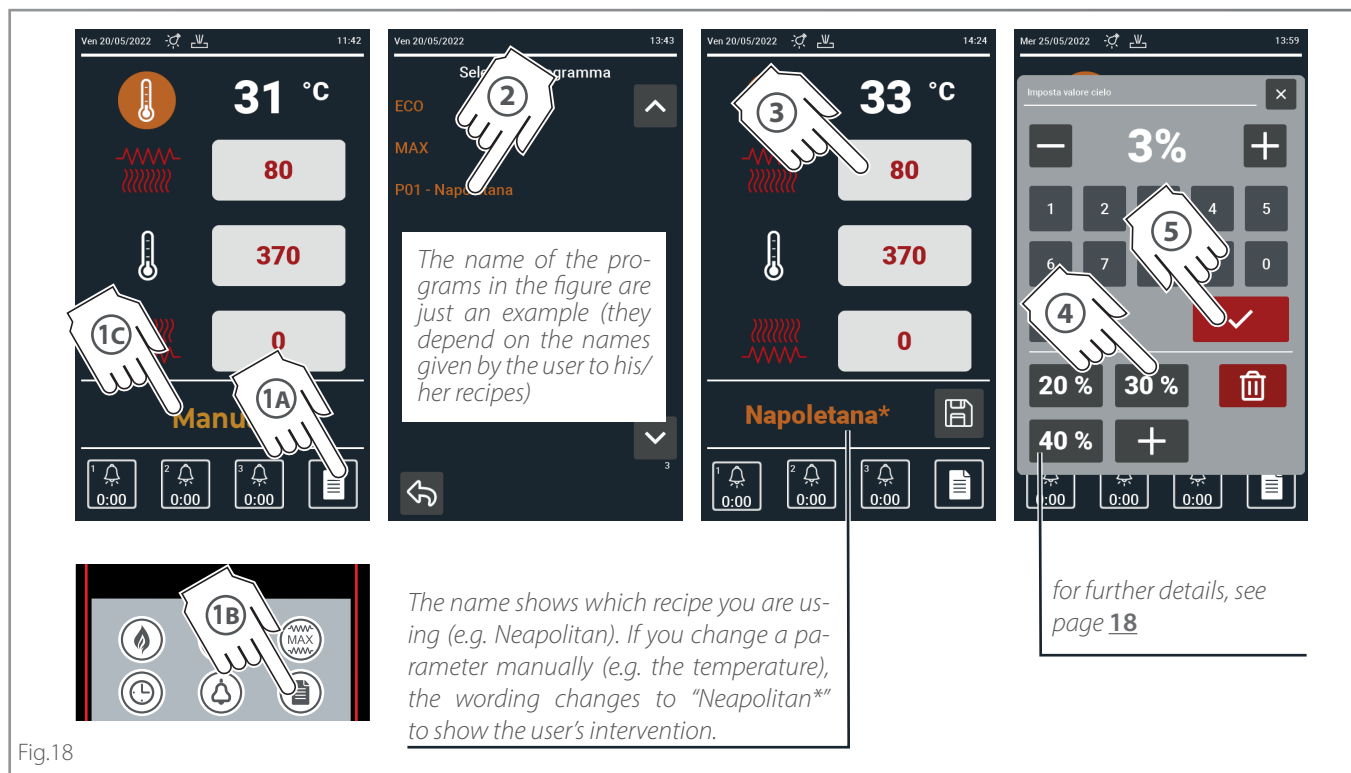


Fig.18



Fig.19

## SPECIAL FUNCTIONS: MULTI SELECTION

 The **MULTI SELECTION** function allows creating secondary values so that the recipe setting is quicker and more practical.

In the example of ► **Fig.20** the left image shows the setting screen if the **MULTI SELECTION** function is used, while the right one shows the screen with the traditional view.

In the first case, to set a value, just touch it, in the second the value must be entered using the keypad.

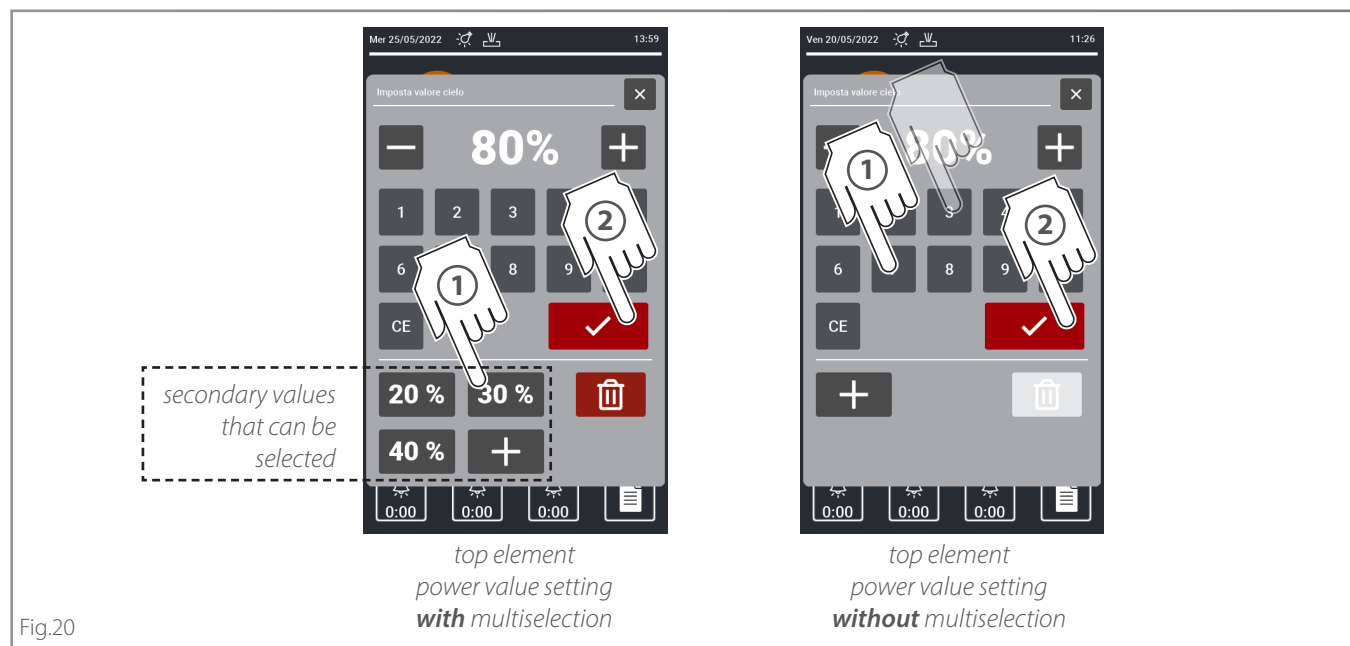



Fig.20

## How to set a multi selection ► Fig.21

- ① Touch the desired field.
- ② Touch the + key.
- ③ Enter the desired value; we recommend you set the values you use more frequently.
- ④ Confirm with . It is possible to enter up to 4 secondary values repeating the procedure in paragraph ②.

Not to lose the values entered at the end of the procedure it is necessary to save the changes (see ► **Fig.17**).

After entering all the values for multi-selection, setting up a recipe will be faster.

You will just need:

- ① To touch the desired field.
- ⑤ Select the desired value among the set ones, touching it will start automatically.



Fig.21

## C STARTING COOKING

### ► Fig.22

Once preheating is complete, you can start cooking and bake the products using personal protection equipment (e.g. gloves) and tools suitable for contact with food and made of material resistant to high temperatures (e.g. steel).



*For optimal results, always adhere to the oven capacity declared by the Manufacturer and position the products to be cooked evenly in the cooking chamber.*

During cooking, it is always possible to change any value by (e.g. the temperature) acting as usual.

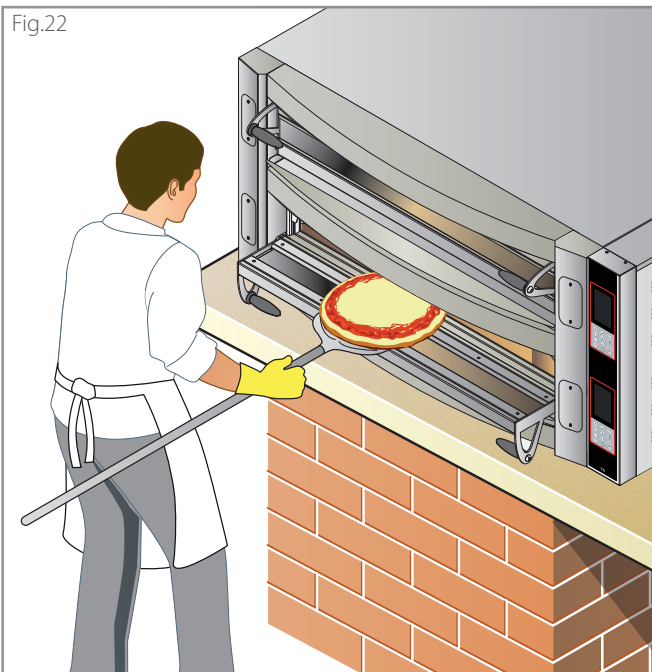


Fig.22

## D SWITCHING THE LIGHT ON (OPTIONAL)

### ► Fig.23

When necessary, it is possible to switch on the oven light to check the cooking, acting on the **LIGHT** key. Press the same key to switch it off.

## E ADJUSTING THE STEAM HOLES

### ► Fig.24

In the back of the cooking chamber there are some steam holes: they can be more or less open to keep the degree of humidity more suited to the type of product to bake in the cooking chamber.

To open the vents, keep the **VENT** key pressed continuously: they start opening progressively.

To block them in the desired position, just release the same key.

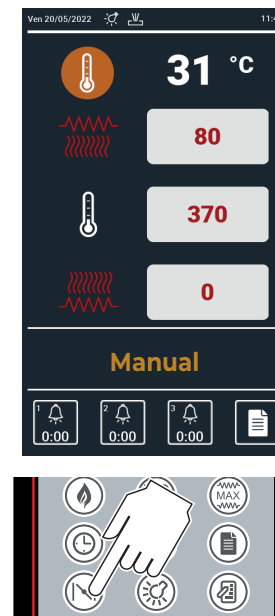


Fig.24


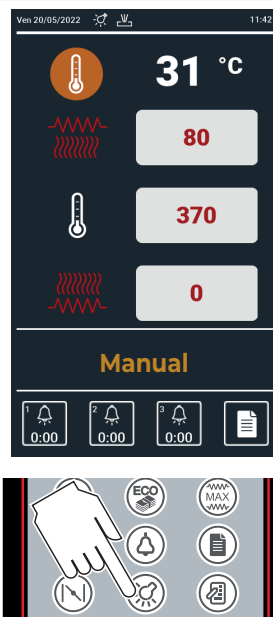


Fig.23

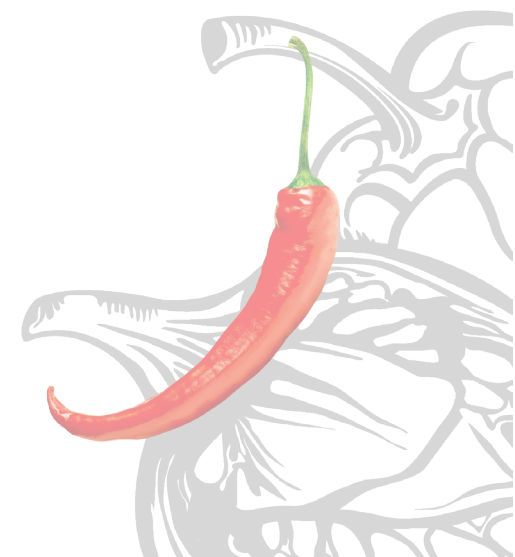



## F ACTIVATING TIMERS

If you wish, you can enable up to three timers that will go off when the set time expires. This corresponds to the time you reckon the pizzas will need to cook.



### TIMER SETTING

#### ► Fig.25 - setting from display

- 1 Touch the **TIMER**  icon you wish to set (in the example timer 1).
- 2 An alphanumeric keypad will appear on which the desired value can be entered (in minutes: seconds).
- 3 Confirm with  or cancel with **CE**.

Repeat points from ① to ③ to set timers 2 and 3.

#### ► Fig.26 - settings from keypad

- 1 Press the **TIMER**  key on the keypad.
- 2 Touch the timer you wish to set (in the example timer 1).
- 3 An alphanumeric keypad will appear on which the desired value can be entered (in minutes: seconds).
- 4 Confirm with  or cancel with **CE**.

Repeat points from ① to ④ to set timers 2 and 3.

### TIMER IN PROGRESS

After setting a timer, the countdown starts.

At the end of the time set for each timer:

- the expired timer flashes;
- a buzzer starts (to stop it press the corresponding timer key).



**Warning: the oven continues heating when the buzzer goes off!**

### STOPPING A TIMER IN PROGRESS

Press the icon of the timer  you wish to cancel.




When the set time expires (e.g. 3 minutes), a buzzer will sound to show cooking has completed but the oven keeps heating until the key  is pressed

Fig.25




When the set time expires (e.g. 3 minutes), a buzzer will sound to show cooking has completed but the oven keeps heating until the **ON/OFF** key  is pressed

Fig.26

## Using the recipes

Saving a recipe means you can reuse it without having to reset its cooking parameters.

Moreover, by giving it a name (e.g. Neapolitan), it can be easily found and quickly started.

### USING AN ALREADY STORED RECIPE

#### ► Fig.27

To use a stored recipe:

- ① Press the **PROGRAM** key in the display ①A or on the keypad ①B or touch ①C.
- ② The list of the available recipes is displayed: touch the **NAME OF THE RECIPE** you wish to use (e.g. Neapolitan): the oven starts to heat with the relative parameters.
- ③...⑤ If you wish, you can change the parameters of the selected recipe (e.g. top percentage) as explained in the previous chapter: the changes will affect **only the cooking in progress** and will not affect the original recipe (temporary effect).

📄 To modify the original recipe permanently, see page [23](#)

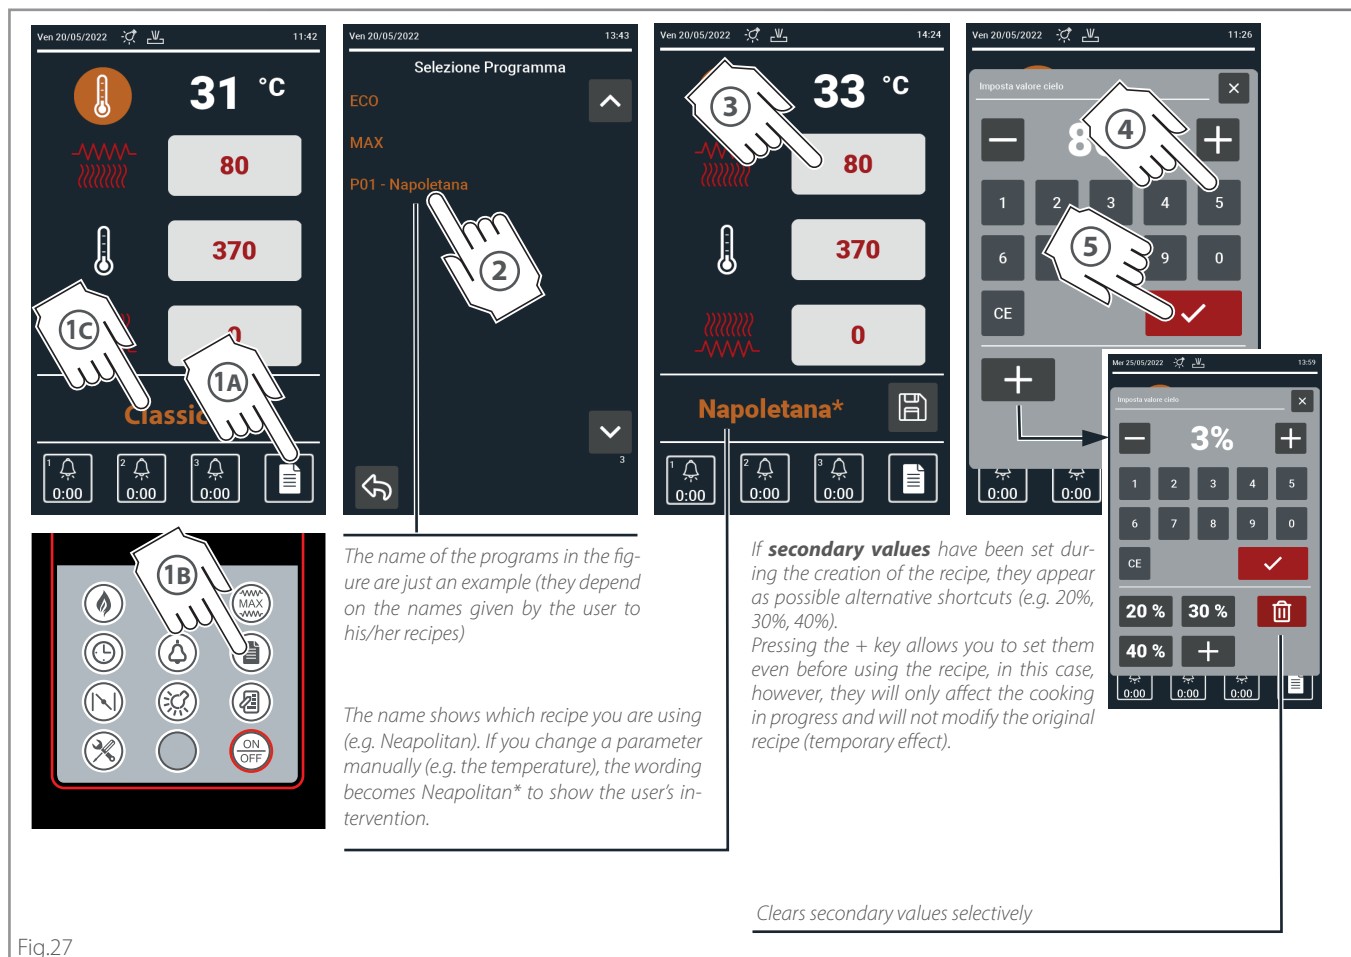


Fig.27

## CREATING/SAVING A RECIPE

► Fig.28

A recipe can be **saved** while cooking is in progress (see ► Fig.17 chap. **SAVING THE SET PARAMETERS**) or **created** from the **PROGRAM MANAGEMENT** menu following the instructions below:

- ① Touch the **SERVICE** icon (with the oven in stand-by).
- ② Touch the **PROGRAM MANAGEMENT** icon.
- ③ Touch the **NEW PROGRAM** key.
- ④ Assign **a name to the recipe** (in the example "Classic"): in this way it will be easy to recognize the one you need; Confirm with **✓** or cancel with **CE**.
- ⑤ Setting the cooking parameters:
  - **top power;**
  - **cooking temperature;**
  - **bottom power.**

For correct filling out it is necessary to enter:

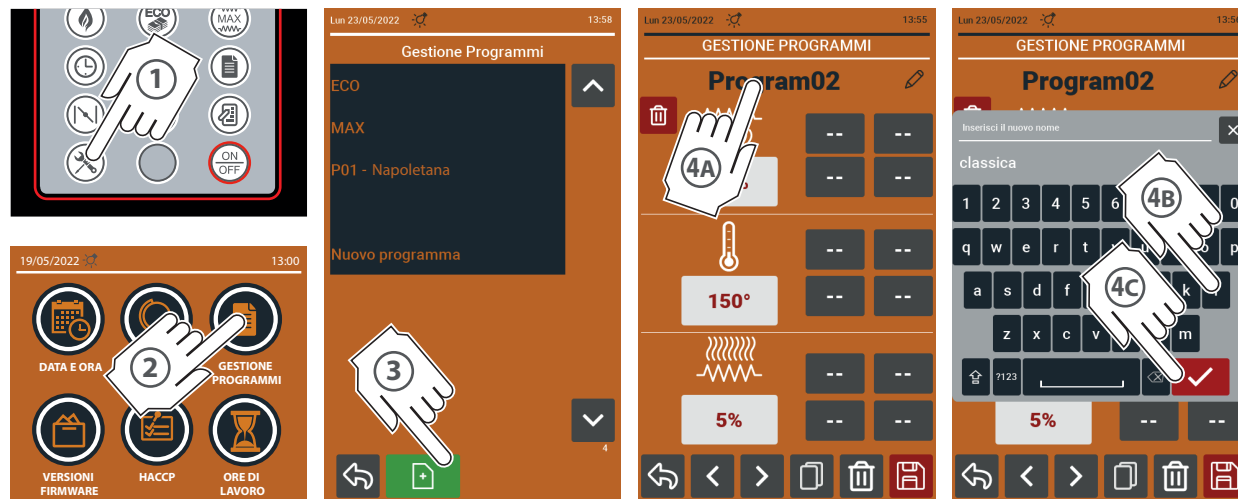
- the **main value** ► default value with which the recipe starts;
- **secondary values** ► values that, while cooking, can be quickly selected as an alternative to the main default one (for instance see ► Fig.21).

Confirm with **✓** or cancel with **CE** the entries made.


- ⑥ If necessary, you can set up to 3 **timers** which will be activated at the end of the set time (optional).

The procedure for entering the time is the usual one. Confirm with **✓** or cancel with **CE**.

- ⑦ Save the recipe with the **DISC**  symbol.



*assigning a name to the recipe*

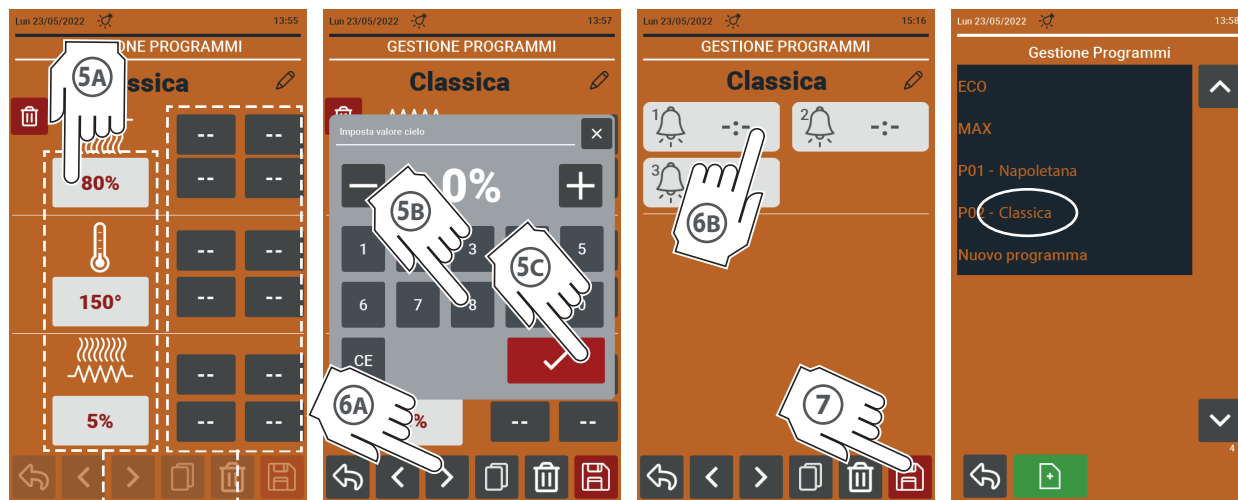

*secondary values*

*main value*




*The "Classic" recipe, saved by the user, has been added to the program list.*

Fig.28




## MODIFYING A STORED RECIPE

► Fig.29


- ① Touch the **SERVICE** icon (with the oven in stand-by).
- ② Touch the **PROGRAM MANAGEMENT** icon.
- ③ Touch the **NAME** of the recipe you wish to modify (in the example "Classic").
- ④ Change the values as usual. Confirm with  or cancel with  the entries made.
- ⑤ Save the recipe with the **DISC**  symbol.

## ELIMINATING A STORED RECIPE

► Fig.30

- ① Touch the **SERVICE** icon (with the oven in stand-by).
- ② Touch the **PROGRAM MANAGEMENT** icon.
- ③ Touch the **NAME** of the recipe you wish to delete (in the example "Classic").
- ④ Touch the **BASKET**  symbol:
  - the basket **4A** allows to delete the parameter values selectively;
  - the basket **4B** deletes the recipe after the decision has been confirmed **4C**.

## DUPLICATING A STORED RECIPE

- ① Touch the **SERVICE** icon (with the oven in stand-by).
- ② Touch the **PROGRAM MANAGEMENT** icon.
- ③ Touch the **NAME** of the recipe you wish to duplicate, for instance **CLASSIC**.
- ④ Touch the  key; a new recipe is created with the name of the starting recipe and a final (01), for instance **CLASSIC (01)**; it can be changed as you wish, while the starting recipe **CLASSIC** will keep its original parameters.

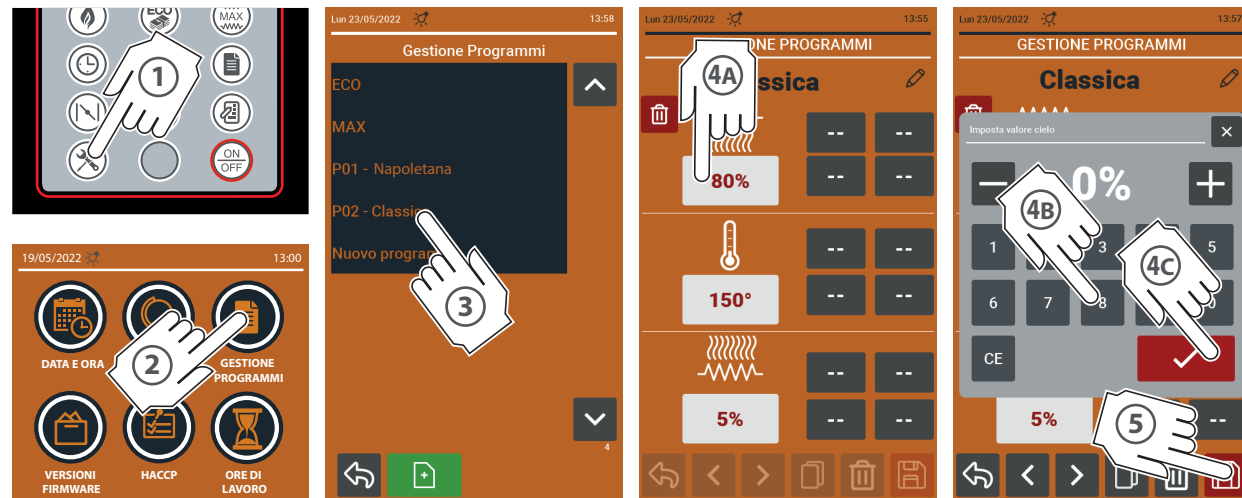


Fig.29

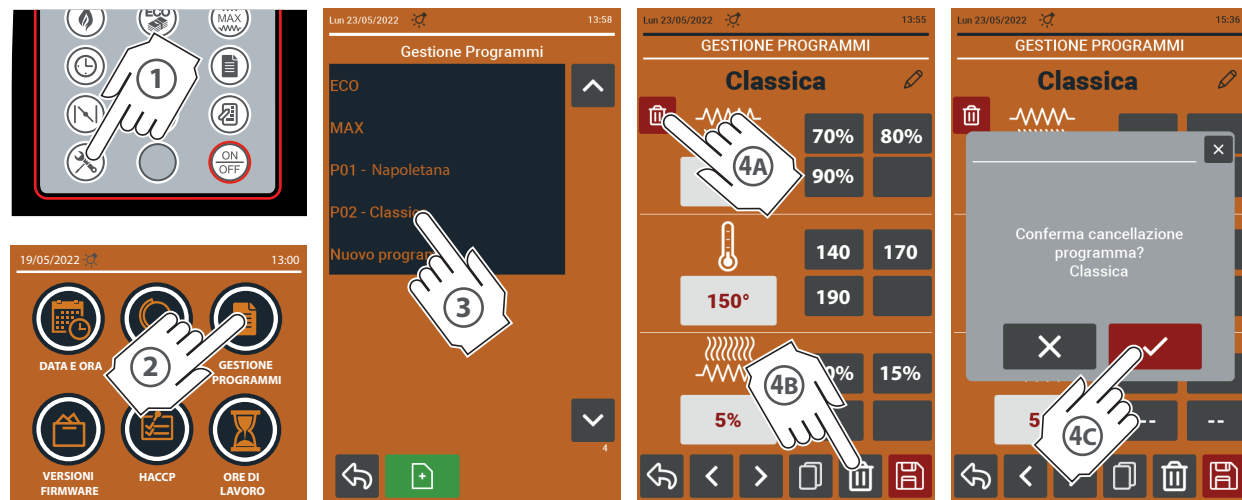


Fig.30




## MAX program

The **MAX** program is used to quickly raise the temperature of the cooking chamber and the refractory surface when the user realizes that they are too low for his needs.

### Default values of the MAX program

- **duration:** 1 minute
- **temperature:** increase of 30 °C - 86 °F over the chamber temperature (offset)
- **power:** top and bottom at 100%

### STARTING THE PROGRAM

- 1 To start the program, touch its symbol .
- 2 A screen appears that allows you to:
  - 2A **start the program** by pressing the  key: in this case the program will last 1 minute (default duration)
  - 2B **set the duration of the program** by entering the desired time (e.g. 4:30 minutes) and then **2C** start it by pressing the  key.
- 3 A summary screen appears: touching the **TOP** or **BOTTOM** field it is possible to set the power at **100%** or at **0%** (it is not possible to set powers other than these two values). The entered values are **temporary**, that is they apply only to the **MAX** program in progress; to modify its values **permanently** act as explained on page 23.

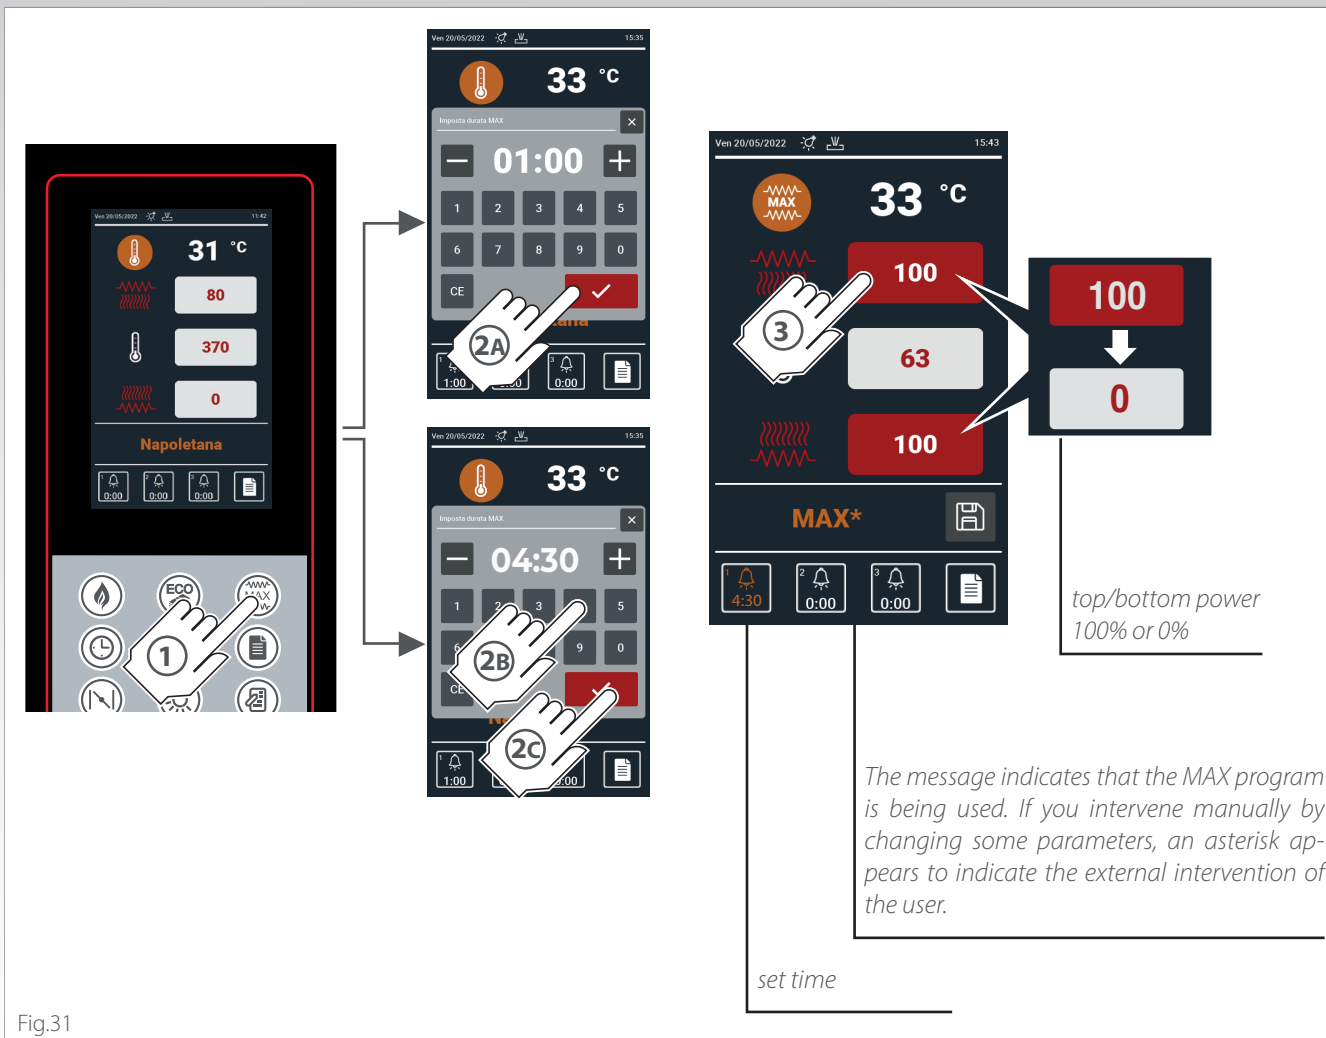



Fig.31

### PROGRAM END

The program ends:

- When the  key is pressed.
- When a different program is selected.
- When the oven is switched off.
- At the end of the default time (1 minute) or that set by the user (for example 4:30 minutes) the buzzer sounds and you return to the program that was active before starting the **MAX** program.


## ECO program

The **ECO** program is used to preserve the functionality of the oven when it is NOT working.

### Default values of the ECO program


- **temperature:** 280 °C -536 °F
- **power:** top 45% and bottom 0%

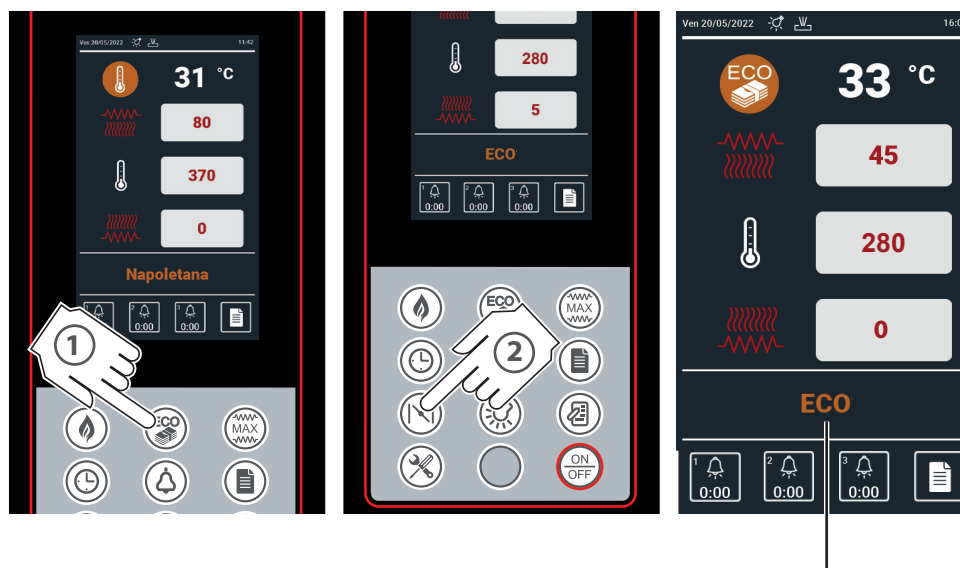
### STARTING THE PROGRAM

- 1 To start the program, touch the  symbol.
- 2 Open the chimney to avoid overheating the stone.
- 3 The program set by the manufacturer will start automatically, allowing constant maintenance of the temperature in the chamber, energy-saving and no overheating of the bottom.

### PROGRAM END

The program ends:

- When the  key is pressed.
- When a different program is selected: the oven will return to the previous settings and will return to the set temperature in a short time.
- When the oven is switched off.



The message indicates that the ECO program is being used.

Fig.32

## Programmed switch-on



The programmed switch-on function is very useful because the oven can be already hot, and therefore ready to bake, when the restaurant is opened.

With this function, you can program **the oven switching on and off automatically** for the whole week.

It is possible to program up to a maximum of **4 events** a day (that is 4 daily switch-ons and switch-offs).

## SETTING A PROGRAM

### ► Fig.33

- ① Touch the **PROGRAMMED SWITCH-ON** icon.
- ② Touch a white rectangle.
- ③ ④ Set the details, choosing:

the **days** the programmed event must take place

**orange day** ► an event is planned (programmed switch-on or switch-off)

**grey day** ► no event is programmed

the oven **switch-on** time

the oven **switch-off** time

the **recipe** the oven has to start with

- ⑤ Confirm the entered details with

- ⑥.....⑬ If necessary, program other events repeating the same procedure.

Fig.33





**Event 1:** on Mondays, Tuesday and Fridays, the oven will switch on at 11:00 in the morning and switch off at 14:00 with the "NEAPOLITAN" recipe

**Event 1:** on Saturdays and Sundays the oven will switch on at 11:00 in the morning and switch off at 15:00 with the "CLASSIC" recipe

**Event 2:** the oven will switch on every evening at 18:00 in and switch off at 23:30 with the "NEAPOLITAN" recipe.

► Fig.34

- At the end of the settings it is necessary to make the weekly function operational by moving the cursor to the right so that it turns green and the number **1** is displayed.

 <b>0</b> <b>grey icon</b>	<ul style="list-style-type: none"> <li>the weekly programmed switch-on mode is inactive (which remains set anyway);</li> <li>the user's manual (non-automated) switch-on mode is active;</li> </ul>
 <b>1</b> <b>green icon</b>	<ul style="list-style-type: none"> <li>the weekly programmed switch-on mode (based on the details set) is active</li> </ul>

- Confirm the entered details with .

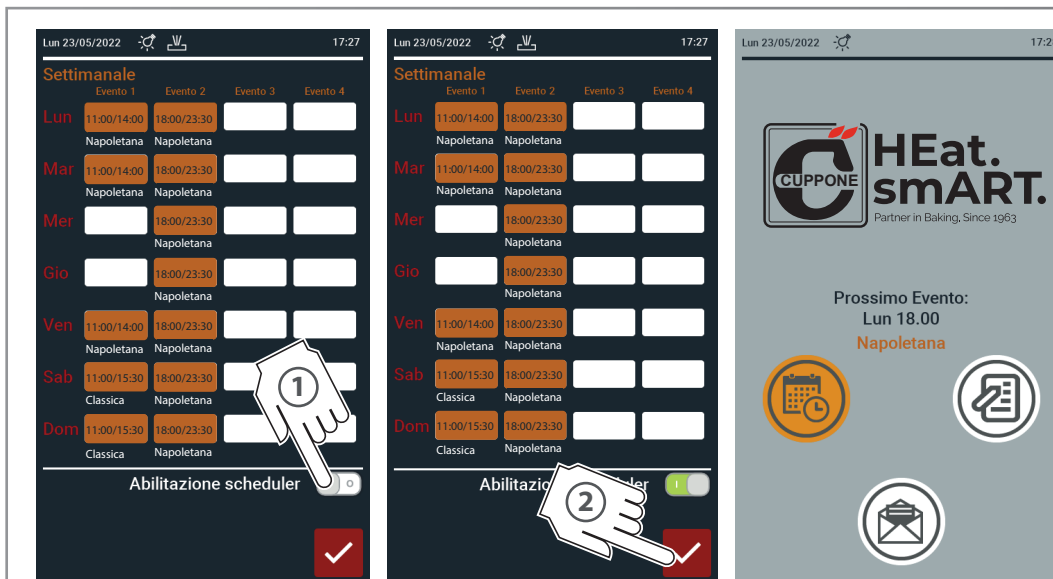



Fig.34

When a weekly programmed switch-on is active, the **STAND-BY** page shows the time and the recipe of the next automatic switch-on and the icon turns orange.


## CANCELLING A WEEKLY PROGRAM

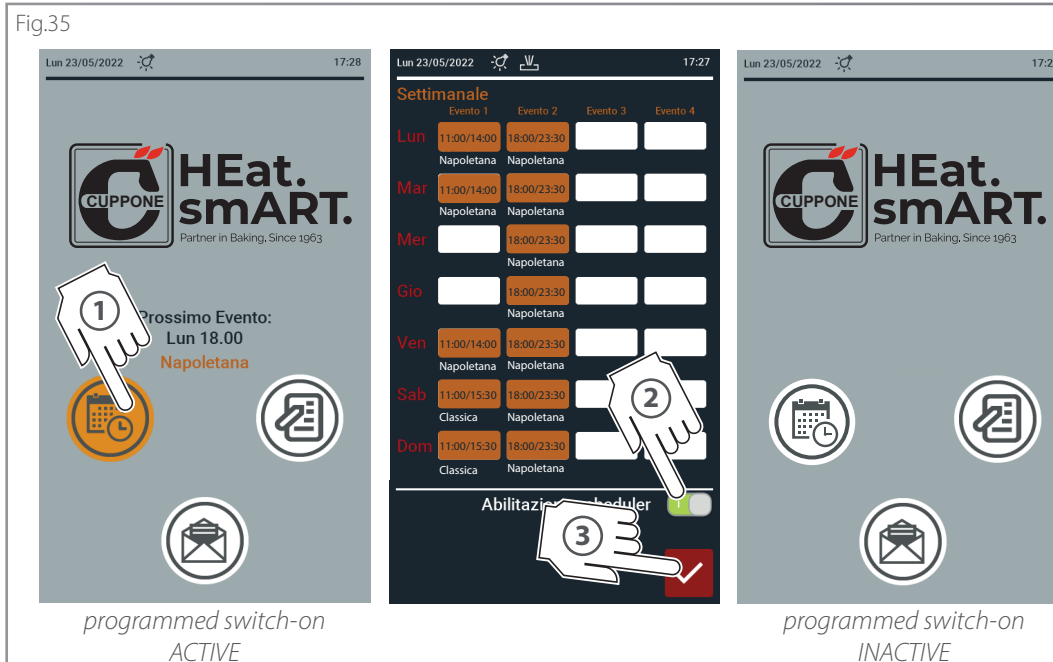► Fig.35

- Touch the **PROGRAMMED SWITCH-ON** icon.
- Disable the programming by moving the slider to the left so that it turns grey and **0** is displayed.
- Confirm your selection with .

From now on, the oven must be switched on/off manually by the user.

The previous programming however remains in the memory; to reactivate it, simply move the cursor back to the right so that it turns green and **1** is displayed.





programmed switch-on  
ACTIVE

programmed switch-on  
INACTIVE

## CANCELLING AN EVENT

► Fig.36

- ① Touch the **PROGRAMMED SWITCH-ON** icon.
- ② Touch the event you wish to delete.
- ③ Touch the **BASKET**.
- ④ Confirm your choice with .
- ⑤ Exit the programmed function with .

## MODIFYING AN EVENT

► Fig.37



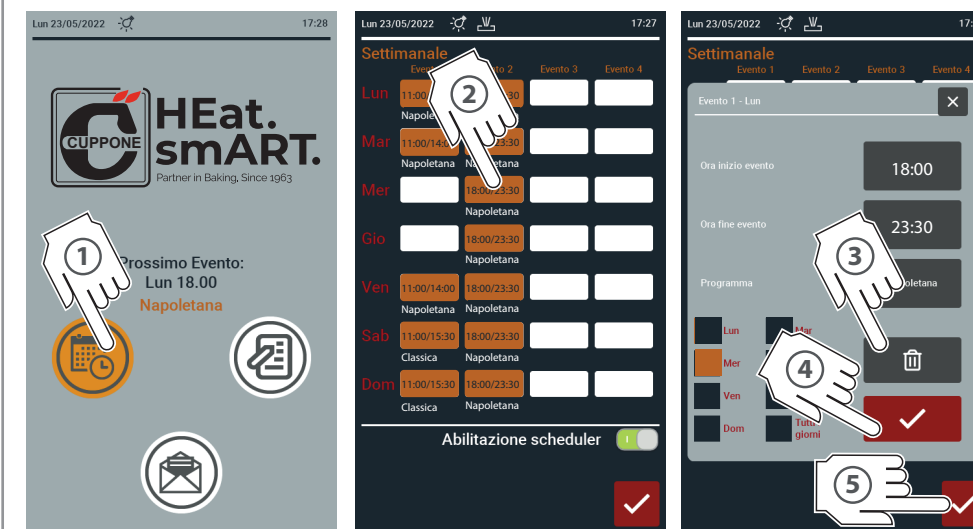
- ① Touch the **PROGRAMMED SWITCH-ON** icon.
- ② Touch the event you wish to modify.
- ③ Touch the parameter you wish to modify (event start or end time, recipe with which the oven must switch on).
- ④ Enter the desired values.
- ⑤ Confirm your choice with .
- ⑥ ⑦ Exit the programmed function with .

Fig.36



*In this example, the event that provided for switching on at 18:00 and switching off at 23:30 on Wednesday has been cancelled.*

*All other events remain active and scheduled.*

Fig.37





## Setting the Note list



The Diary function allows setting up up to 10 notes that will be displayed at the set time and on the set days. Each note can have up to 200 text characters and it is possible to program when the note will expire or has to be repeated (e.g. "Oven cleaning" to be repeated every month).

► Fig.38

To create a new note (or modify an existing one):

- enter its **text** (that is what must be displayed);
- enter its **expiry date** (that is when it must be displayed);
- enter when it has to be **repeated** (that is how often it must be displayed):
  - **do not repeat**: the note is displayed on the expiry date and not repeated;
  - **every day**: the note is displayed and then repeated the following day;
  - **every month**: the note is displayed and then repeated the following month. If the following day of the month does not exist (e.g. 29 February), it is repropose the first month when that day exists (e.g. the note is repropose on 29 March);
  - **every year**: the note is displayed and then repeated the following year.

If the oven is switched off, when it is switched back on all the expired notes will be displayed.

By selecting a note, you can modify it or delete it with the two keys shown.

deletes the note  
modifies the note


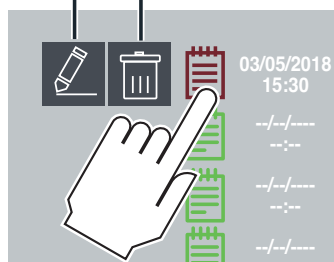



Fig.38

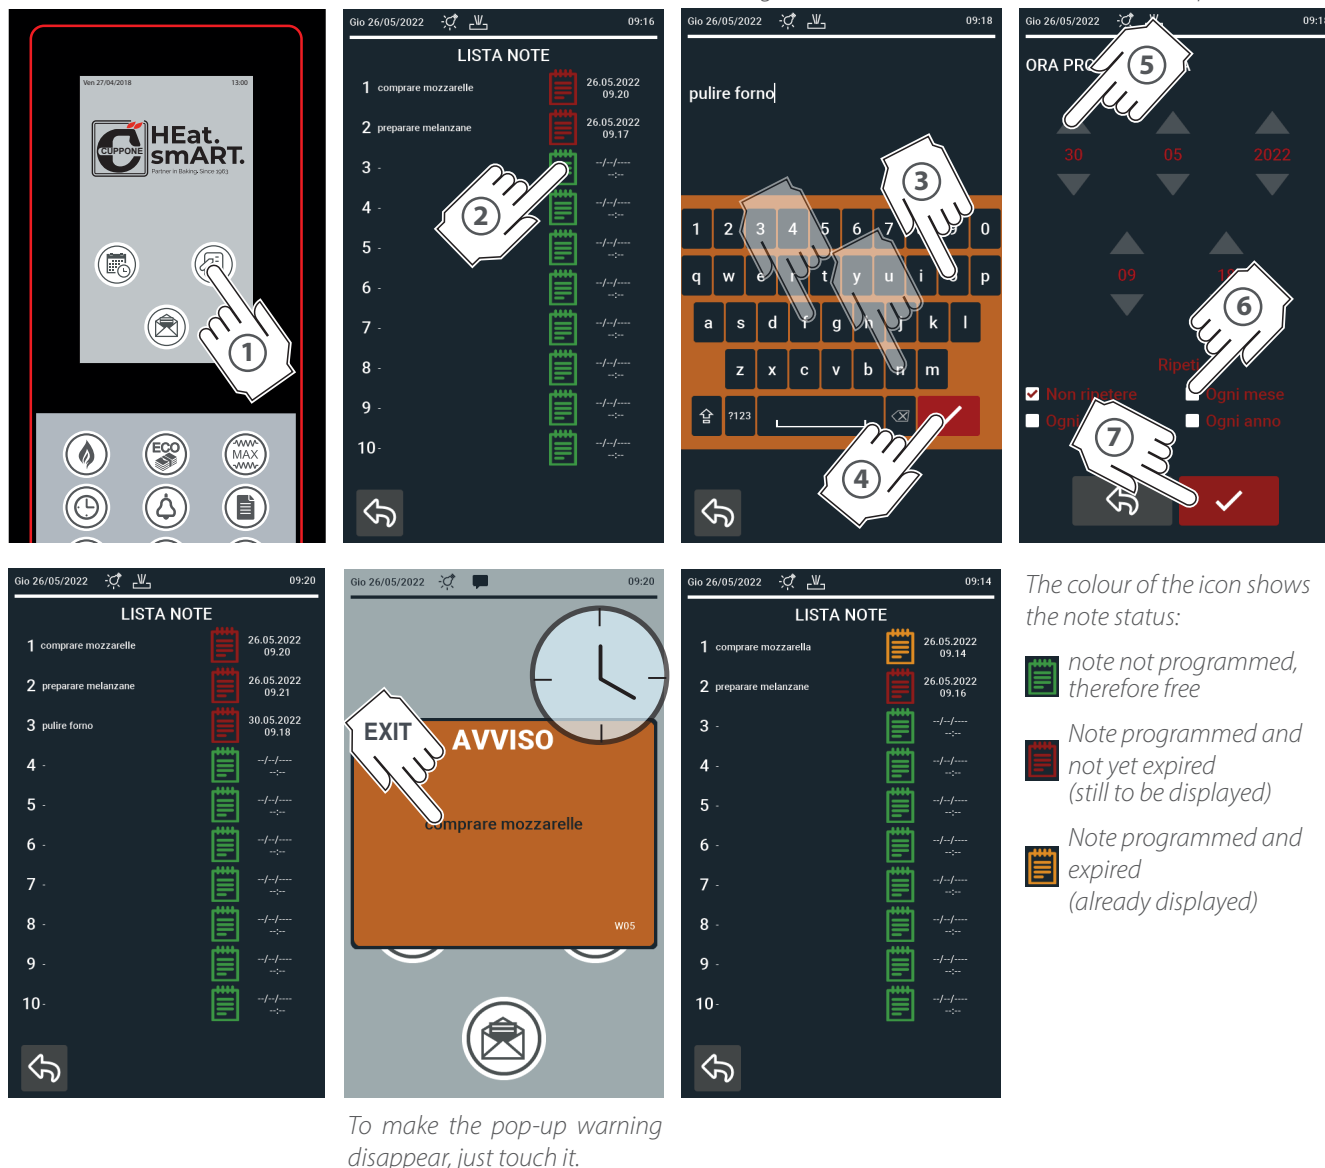

## Setting a Holiday

If enabled, the function:


- **stops the weekly switch-on and -off program** (page 26), if present, until the set time and date, without having to delete it: this is useful if the restaurant is closed for holidays and therefore the oven must not switch on during that period;
- **displays** a message if you try and switch the oven on manually with the **ON/OFF**  key: this prevents accidental switch-ons, for instance during cleaning carried out during the closure period.

► Fig.39

- 1 Touch the **HOLIDAY** icon.
- 2 Touch the white rectangle.
- 3 Set the details, choosing:
  - the **end date** of the holiday (e.g. 29/05/2022)
  - the **end time** of the holiday (e.g. 13:30)
- 4 Confirm the details entered pressing the **OK** key.
- 5 At the end, make the Holiday function operational touching the icon in the bottom RH corner. If it is:
  - white**= the holiday function **is not active** but is programmed
  - orange**= the holiday function is **active** (oven in stand-by until the set time/date).

The main screen displays the message "Holiday mode active until" with the set time/date.

### From now until the set time/date

- (e.g. until 13:30 on 29 May 2022):
- the weekly switch on/off function is disabled;
  - a message warns if you try and switch the oven on manually with the **ON/OFF**  key.
- At 13:31 on 29 May 2022, the function is disabled automatically, weekly programming is resumed, if any, and the manual switch-on of the oven is always allowed.

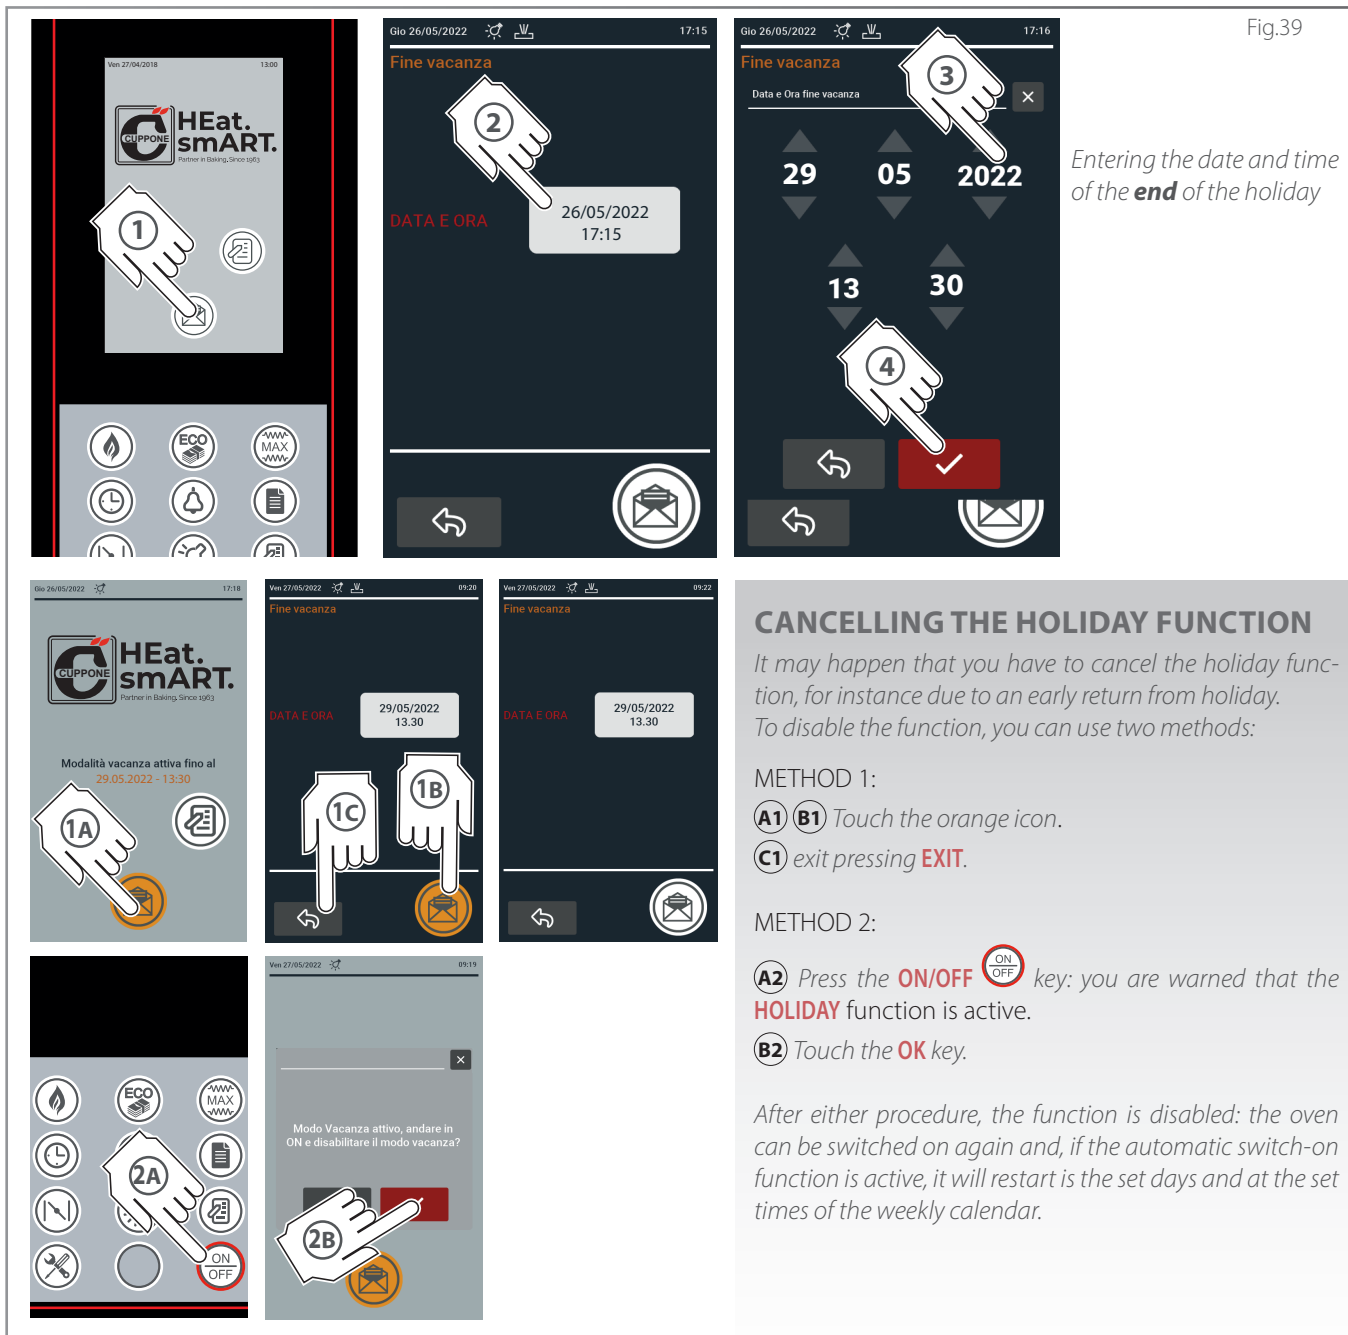


Fig.39

Entering the date and time of the **end** of the holiday


## CANCELLING THE HOLIDAY FUNCTION

It may happen that you have to cancel the holiday function, for instance due to an early return from holiday. To disable the function, you can use two methods:

METHOD 1:

- (A1) (B1) Touch the orange icon.
- (C1) exit pressing **EXIT**.

METHOD 2:

- (A2) Press the **ON/OFF**  key: you are warned that the **HOLIDAY** function is active.
- (B2) Touch the **OK** key.

After either procedure, the function is disabled: the oven can be switched on again and, if the automatic switch-on function is active, it will restart is the set days and at the set times of the weekly calendar.

## Settings

The **SETTINGS** section is dedicated to three different persons: the user, installer and maintenance technician.





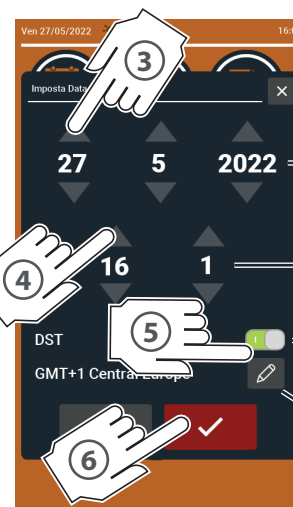
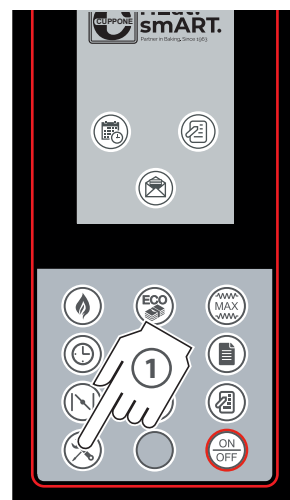
**To prevent unauthorized people from accessing the programming of the parameters that, if incorrectly set, may affect the use of the oven, some menus are protected with a password supplied specially by the Manufacturer.**

## DATE AND TIME

► Fig.40

In this section, the current date and time can be set.

- ① Touch the **SERVICE** icon.
- ② Touch the **DATE AND TIME** icon.
- ③ Set the current date touching the arrows
- ④ Set the current time touching the arrows
- 5A Set the **automatic passage to summer time** (DST - daylight saving time)
  - **Europe:** summer time starts the last Sunday in March at 2:00, winter time starts the last Sunday in October at 3:00;
  - **United States:** summer time starts the second Sunday in March at 2:00 a.m.; winter time starts the first Sunday in November at 2:00 a.m.
- 5B Set the **GMT (Greenwich Mean Time)** choosing the geographical area your country belongs to (e.g. for Italy: GMT +1 Central Europe).
- ⑥ At the end of the settings, confirm with  or cancel with .




current date

current time

5A DST daylight saving time transition

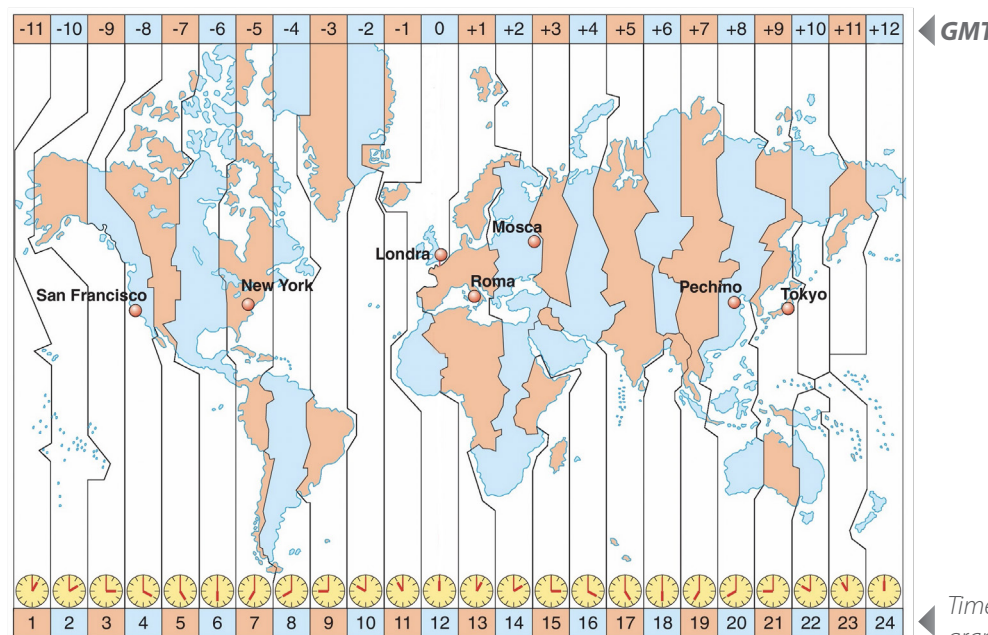5B time zone



Time zones in the world divided into geographical areas



Time variation based on the geographical area the country belongs to

Fig.40

## LANGUAGE


► Fig.41

In this section you can set the language used in the menu displays: the active language is highlighted in red.

- ① Touch the **SERVICE** icon.
- ② Touch the **LANGUAGE** icon.
- ③ Touch the desired language; the languages currently available are: English, Italian, French, Spanish, German, Russian and you can scroll through them with the arrows
- ④ At the end of the settings, confirm with  or cancel with .

## Program management


In this section you can save a recipe: this means you can reuse it without having to reset its cooking parameters. Moreover, by giving it a name, it can be easily found and quickly started.

-  See page [21](#)

## FIRMWARE VERSIONS

► Fig.42

In this section you can come to know the firmware version installed on the oven and other data about it.

- ① Touch the **SERVICE** icon.
- ② Touch the **FIRMWARE VERSION** icon.
- ③ At the end of the display, exit the screen with .

## HACCP

Section not accessible to the user, reserved to qualified personnel.

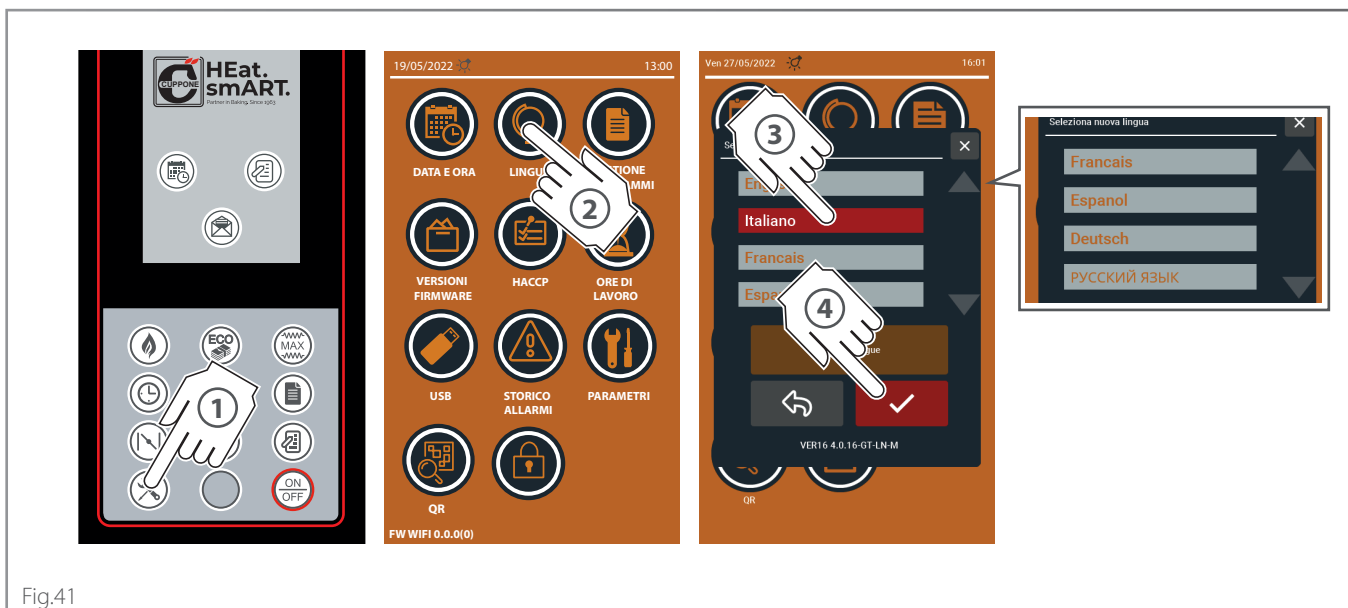


Fig.41

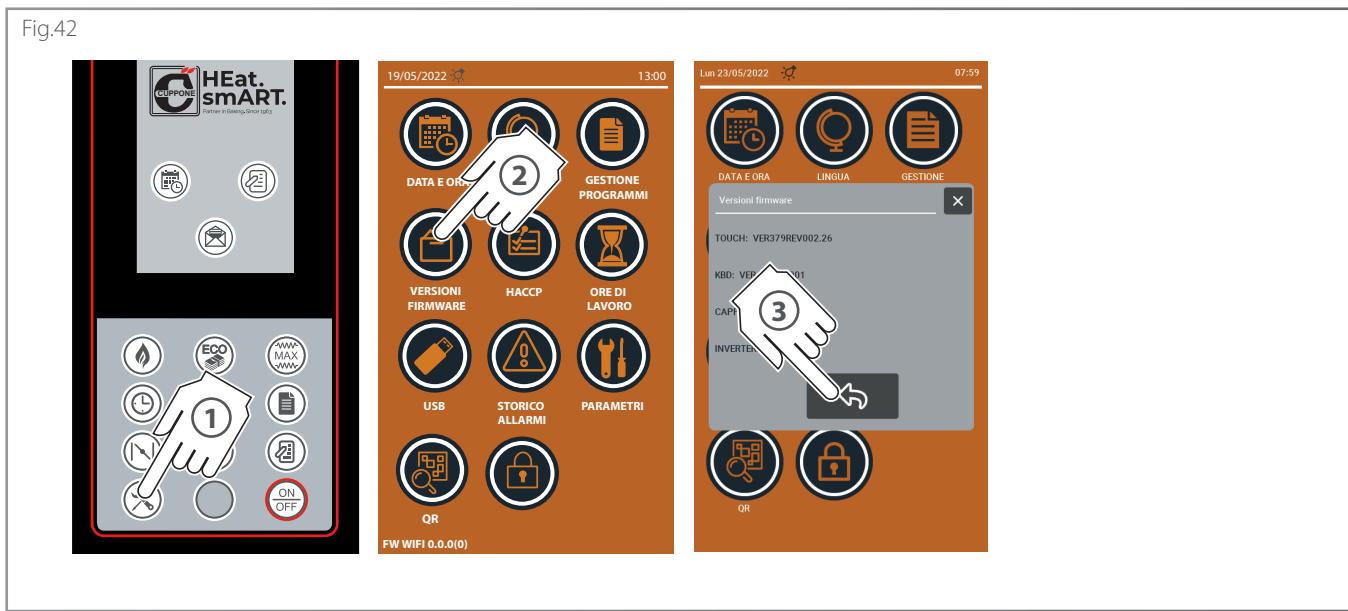


Fig.42


## WORKING HOURS: RESETTING THE MAINTENANCE HOURS (COUNTER RESET)

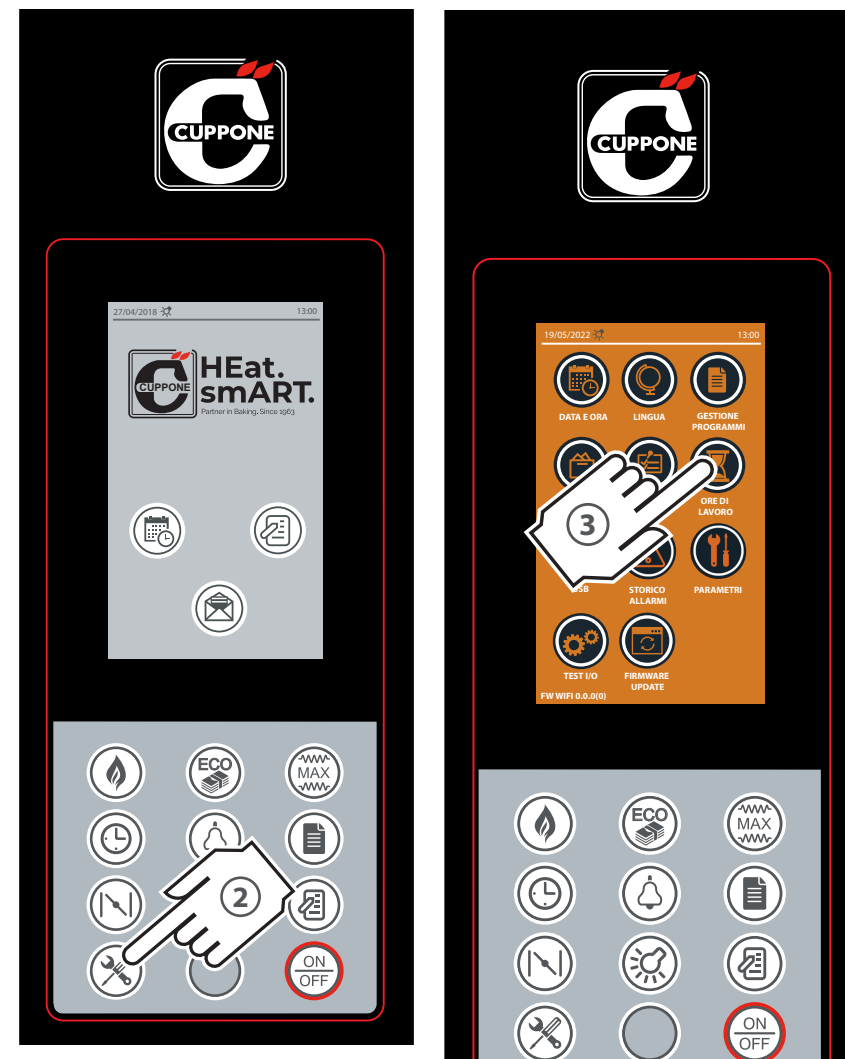A counter inside the oven counts the work hours carried out; after a certain number of hours, a pop-up appears on the display that warns about the need to carry out maintenance on the oven.

After carrying out the required operation (for example cleaning under the stones), it is necessary to restart the working hours count from zero, resetting the counter.



- ① Touch the warning screen to continue with the operation.



- ② With the oven in stand-by, touch the **SERVICE** icon.
- ③ Touch the **WORK HOURS** icon.



- ④ Touch the **BASKET** icon next to "Hours since last maintenance: 05\*(h)"

\* the shown number is just an example



- ⑤ Touch the **✓** key to confirm the reset of the maintenance hours (hour counter reset).



- ⑥ Touch the **BACK ARROW** icon or wait a few seconds to exit the screen.



- ⑦ Touch the **SERVICE** icon to return to the stand-by screen.




## USB

### ► Fig.43

In this section, after a technician has done a software update, it is possible to load new recipes, new languages or a logo from a USB stick.

## ALARM LOG

### ► Fig.44

Displays date, time and type of alarms that have occurred. The RESET of the messages and their export are reserved to the Dealer's Service Centre. At the end of the display, exit the screen with .

## QR

### ► Fig.45

By scanning the QR code that appears on the display with a personal device (e.g. smartphone, tablet, etc.) it is possible to download the manuals, quick guides and spare parts sheets or access the Manufacturer's website or Cloud.

The arrows < > allow you to scroll through the available QRs.

At the end of the display, exit the function with .

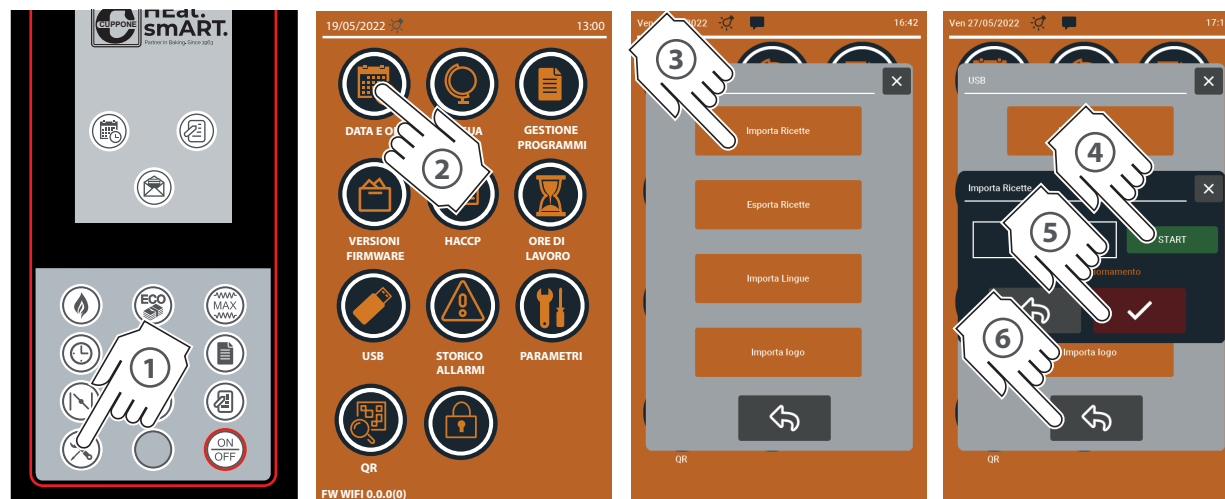


Fig.43



Fig.44



Fig.45

## Warnings

**!** Before any cleaning, it is necessary to **switch off the power** to the appliance (acting on the system switch) and wear suitable personal protection equipment (e.g. gloves, etc.). The user must carry out only routine maintenance, for extraordinary maintenance, contact a Service Centre requesting service from an authorised technician. The Manufacturer warranty does not cover damages due to negligent or incorrect maintenance or cleaning (e.g. use of unsuitable detergents).

**!** Any cleaning must be carried out with the oven **completely cold and wearing adequate personal protection devices (e.g. gloves, etc.)**.

When cleaning any part or accessory do NOT use:

- abrasive or powder detergents;
- aggressive or corrosive detergents (e.g. hydrochloric or sulphuric acid, caustic soda, etc.). Caution! Never use these substances also when cleaning the substructure/floor under the appliance or its base;
- abrasive or sharp tools (e.g. abrasive sponges, scrapers, steel brushes, etc.);
- steamed or pressurised water jets.

**!** It is best to have a Service Centre perform maintenance and inspection on the appliance at least once a year to ensure top working and safety conditions.

Keep the vents of the electrical compartment clean and clear.



Fig.46

## Oven cleaning

### CLEANING THE EXTERNAL STEEL PARTS

Use a cloth dampened with hot soapy water and end with rinsing and drying.

### CLEANING THE GLASS

Clean any glass with a soft cloth and special glass detergent.

### CLEANING THE DISPLAY

Clean the display with a soft cloth and a little detergent for delicate surfaces. Avoid using considerable quantities of product since any infiltration may damage the display. Avoid also using very aggressive detergents that may damage the material the display is made of (polycarbonate).

### CLEANING THE REFRACTORY SURFACE

#### ► Fig.47

On the refractory surface, there are normally some food residues (e.g. fat, food residues, etc.) that must be removed frequently for health and safety reasons.

Remove the coarser food residues with a natural fibre brush; then, if necessary, remove the refractory bricks of the cooking surface as shown in the figure and suck the carbonized residues accumulated under them on the bottom of the oven with an ash extraction bin.

Never use liquids to clean the refractory surface.

**!** While reinserting the bricks, be careful not to pinch your fingers.

**!** Replacement refractory bricks can be obtained from the Manufacturer.

If manual cleaning is not enough, use the **PYROLYSIS** function, ► see page 37

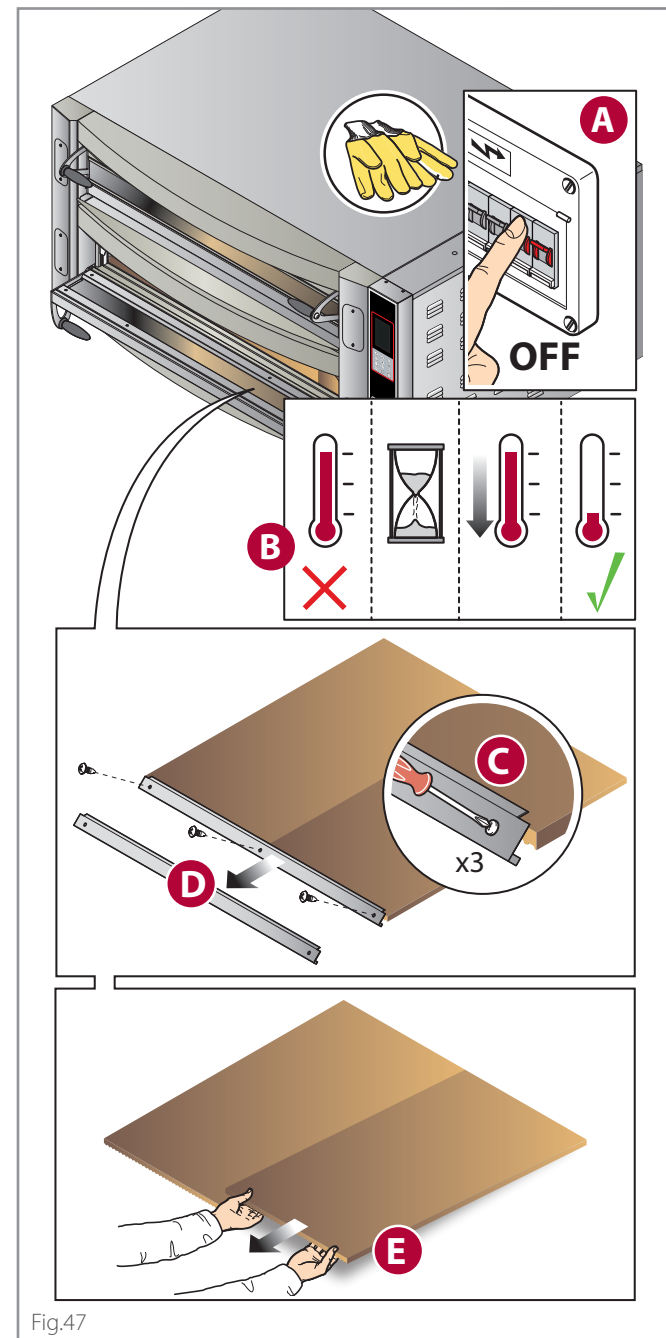


Fig.47

## CLEANING THE CHAMBER WITH THE PYROLYSIS FUNCTION

Pyrolysis is a thermochemical crystallization process of food residues that have deposited in the cooking chamber, which takes place by bringing the oven up to 400 °C - 725 °F.

**! Before starting the pyrolysis, remove the coarser food residues with a natural fibre brush.**

### CD model ovens ▶ Fig.48

- ① Close the chimney touching the relative key.
- ② Set the **chamber temperature to 400 °C - 752 °F**.
- ③ Acting on the **"MIN"** and **"MAX"** keys, set both the **top** and **bottom powers** to **MAX**.
- ④ Switch the lights of the cooking chamber off.
- ⑤ When the temperature has been reached, switch the oven off with the **ON/OFF** key and let it cool down with the door closed.
- ⑥ With a cold oven, clean the chamber from the crystallized food residues using a natural fibre brush and then vacuum with an ash extraction bin ▶ **Fig.50**

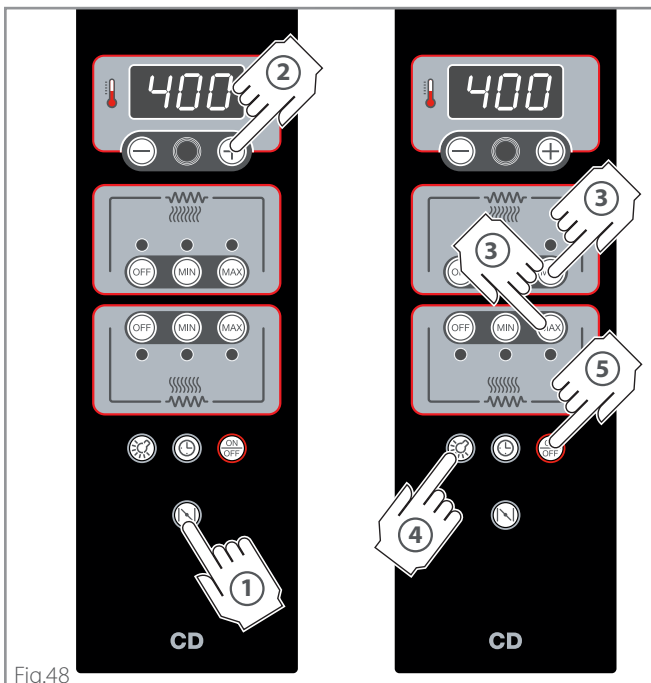


Fig.48

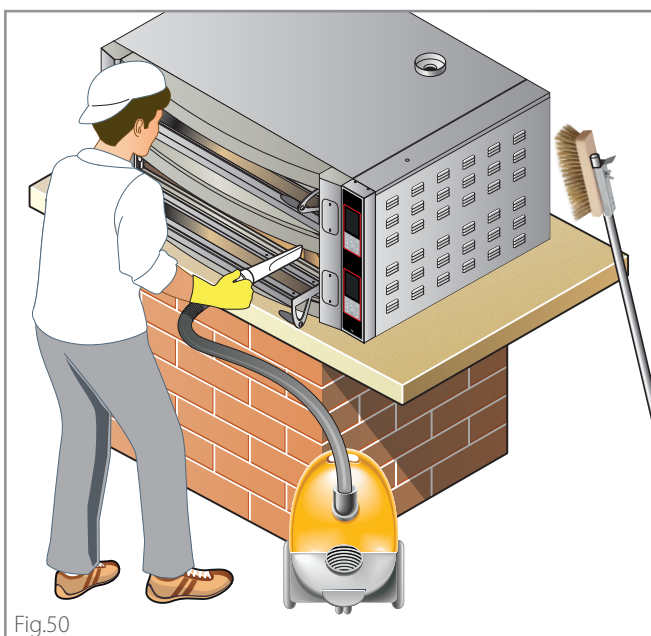


Fig.50

### TS model ovens ▶ Fig.49

- ① Close the chimney touching the relative key.
- ② Touch the **ON/OFF** key.
- ③ Touch the **PYROLYSIS** key.
- ④ Confirm pressing **✓**: the heating of the oven chamber starts until the temperature of 400 °C - 752 °F is reached, when the function stops (to block the function early, press the **PYROLYSIS** key again).
- ⑤ With the oven cold, clean the chamber from the crystallized food residues using a natural fibre brush and then vacuum with an ash extraction bin ▶ **Fig.50**.

**! In the "TS" models, during pyrolysis, the light switches off automatically to preserve the bulbs, on the other hand, in the "CD" models it is necessary to turn it off manually.**

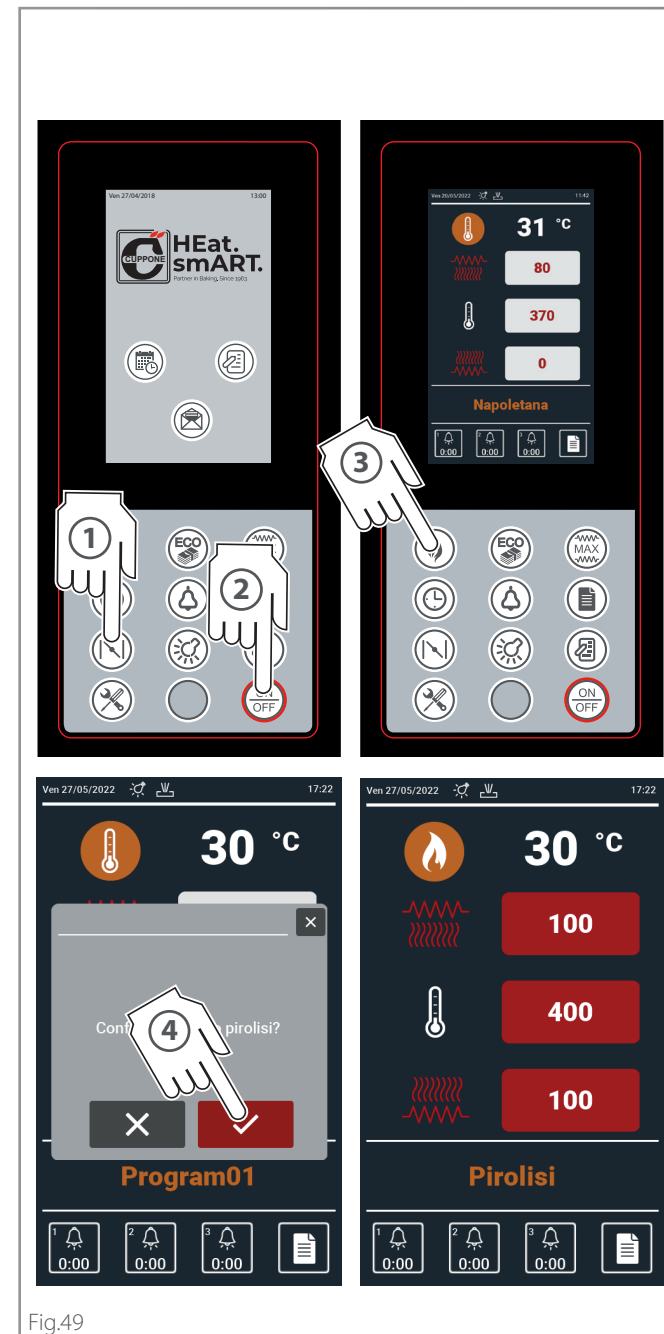


Fig.49

## Replacing components

**⚠ The user must replace only the stated components:** in case of a fault or for extraordinary maintenance, contact the Dealer, requesting service from an authorised technician.

**⚠ For replacements, always use original spare parts to be requested from the Manufacturer:** using non-original spare parts could cause suboptimal performance of the equipment and serious damage to people and the equipment itself not recognized under warranty.

**⚠ Before carrying out any replacement work, it is necessary to disconnect the power supply of the appliance (by acting on the system switch).**

**⚠ Any replacement must be carried out with the oven completely cold and wearing adequate personal protection devices (e.g. gloves, etc.).**

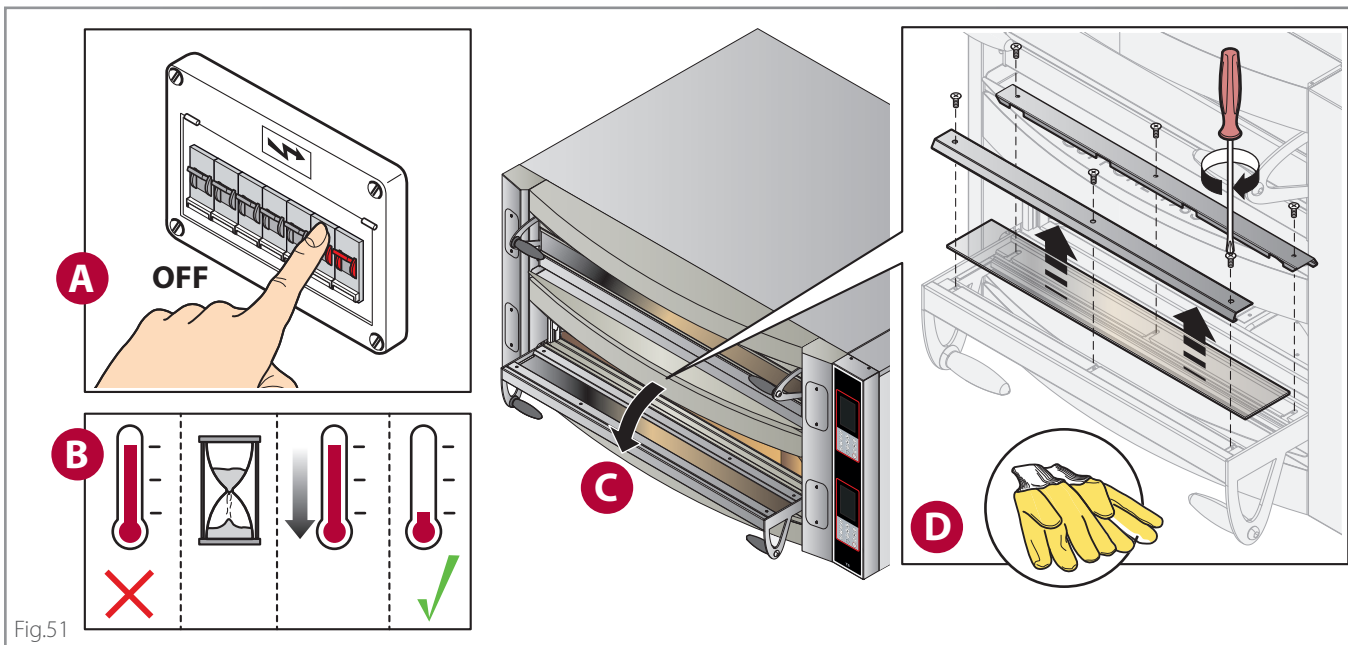


Fig.51

## REPLACING THE DOOR GLASS

► Fig.51

## REPLACING THE INTERNAL BULB AND GLASS

► Fig.52

Before replacing the bulb, **switch off the power** to the appliance (acting on the system switch); it is not enough to use the

**ON/OFF** key, because bulbs can still be live.

**Never touch the bulb glass with your bare hands;** always wear gloves.

Never switch the oven on without having refitted the bulb protective glass; replace it straight away if it breaks.

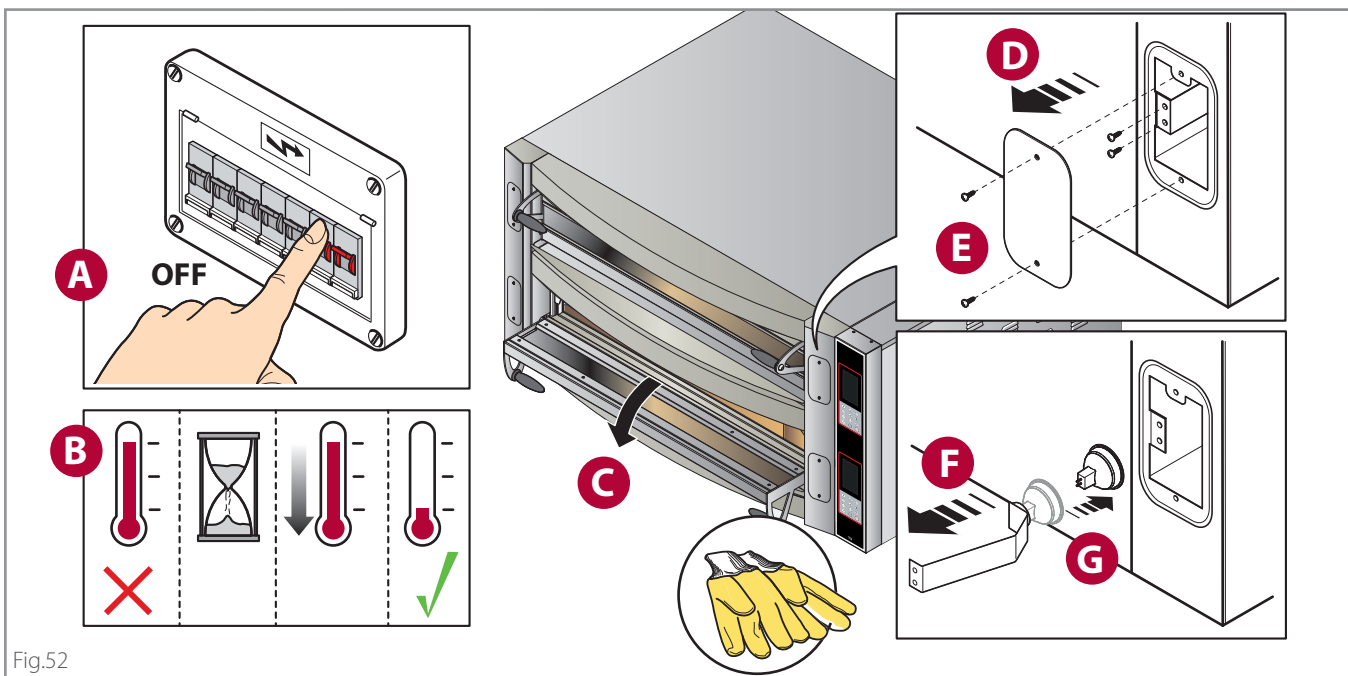


Fig.52

## REPLACING THE REFRACTORY BRICKS

► Fig.53

## REPLACING THE DOOR HANDLE

► Fig.54

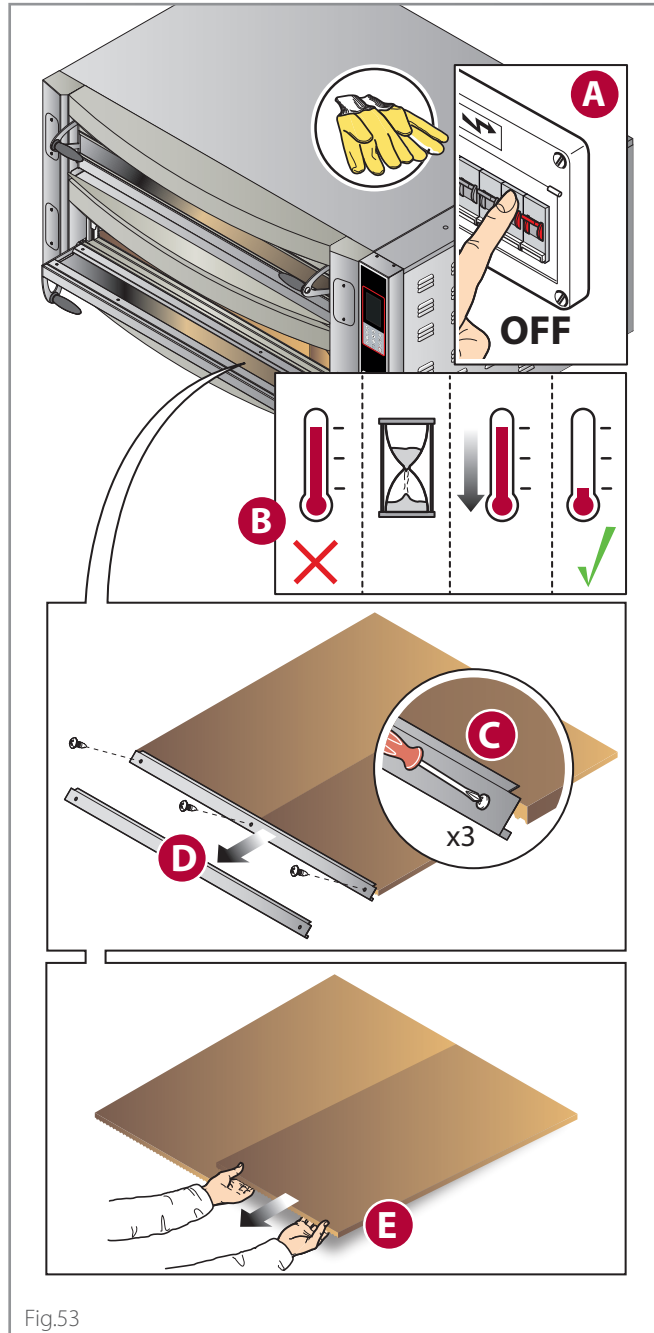


Fig.53

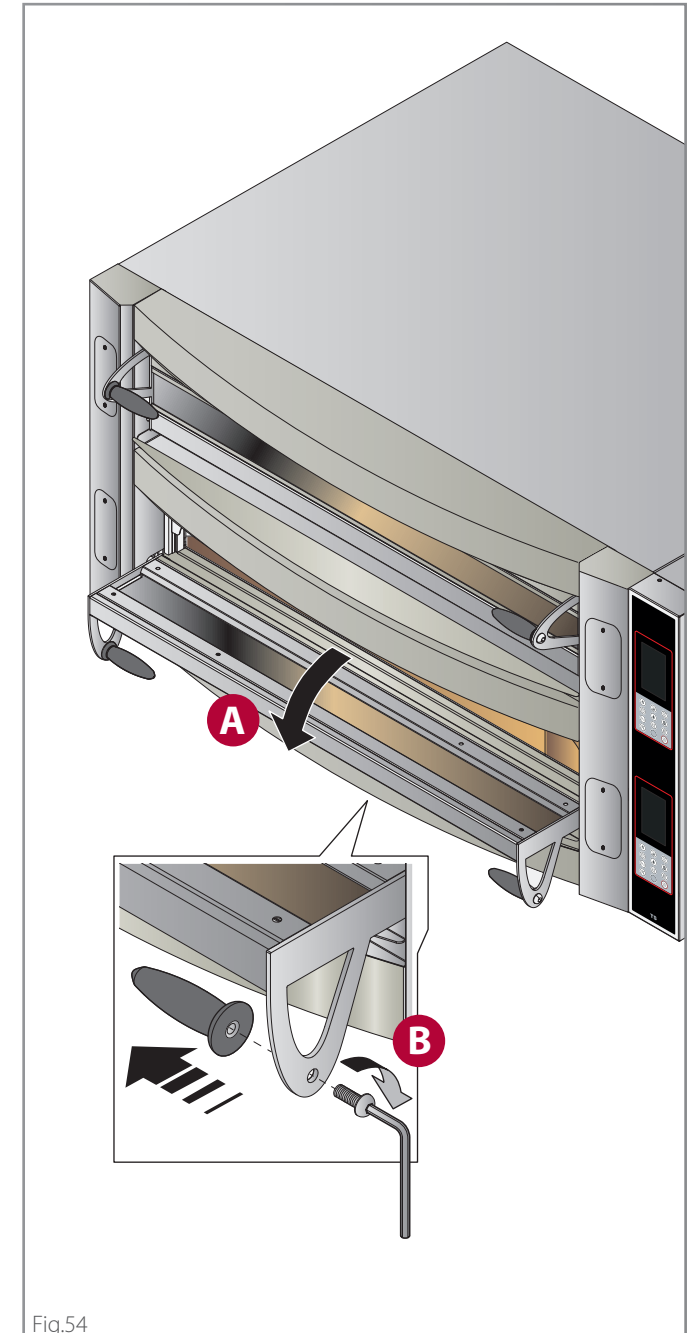


Fig.54



## Oven downtime for prolonged periods

During any downtime, switch the power off. Protect the steel outside surfaces passing over them with a soft cloth slightly damp with Vaseline oil.

Leave the door ajar to guarantee correct ventilation.

Before resuming operations:

- accurately clean the equipment and accessories;
- reconnect the equipment to the power;
- inspect the equipment before using it.

## Disposal at end of life



**Before disposing of the equipment, cut or remove the power cord, with the appliance disconnected from the power supply, to avoid any unauthorized use and the risks associated with it.**



**Block the door opening (for example with adhesive tape or clips) so that no child can accidentally be trapped inside the cooking chamber while playing.**



Pursuant to art. 13 of Legislative Decree no. 49 of 2014 "Implementation of WEEE directive 2012/19/EU on electric and electronic waste", the barred bin symbol specifies that the product was introduced on the market after August 13, 2005 and that it must not be discarded with other waste at the end of its working life but disposed of separately. All the equipment has been made with recyclable metal materials (stainless steel, iron, aluminium, zinc plate, copper, etc.) that as a percentage make up more than 90% of the weight. Attention must be paid to the management of this product at the end of its life, reducing any negative impact on the environment and improving the efficiency of resources, applying the principles of "who pollutes pays", prevention, preparation for re-use, recycling and recovery. Please remember that illicit or incorrect product disposal is punishable by law.

### Information on disposal in Italy

WEEE equipment in Italy must be delivered to:

- to Collection Centres (also named eco-islands or eco-platforms)
- the dealer where new equipment is purchased who must withdraw it free of charge ("one to one" withdrawal).

### Information on disposal in European Union countries

The EU Directives on WEEE equipment has been adopted in different ways by different countries, therefore in order to dispose of this equipment correctly we suggest that you contact your local authority or your dealer in order to ask the correct method of disposal.

## Disposing of ashes and food residues



**The ash and food residues removed with cleaning must be disposed of according to the regulations in force in the country where the oven is used.**

If in doubt, we suggest contacting the local authorities to ask for the correct method of disposal.

While waiting for disposal, the ash and food residues must be stored in fireproof metal cans, resistant to high temperatures and provided with a lid that must always remain closed.

Keep the latter away from the elements and in a place inaccessible to children and animals.

Do not approach materials that can be flammable, explosive or heat-sensitive.

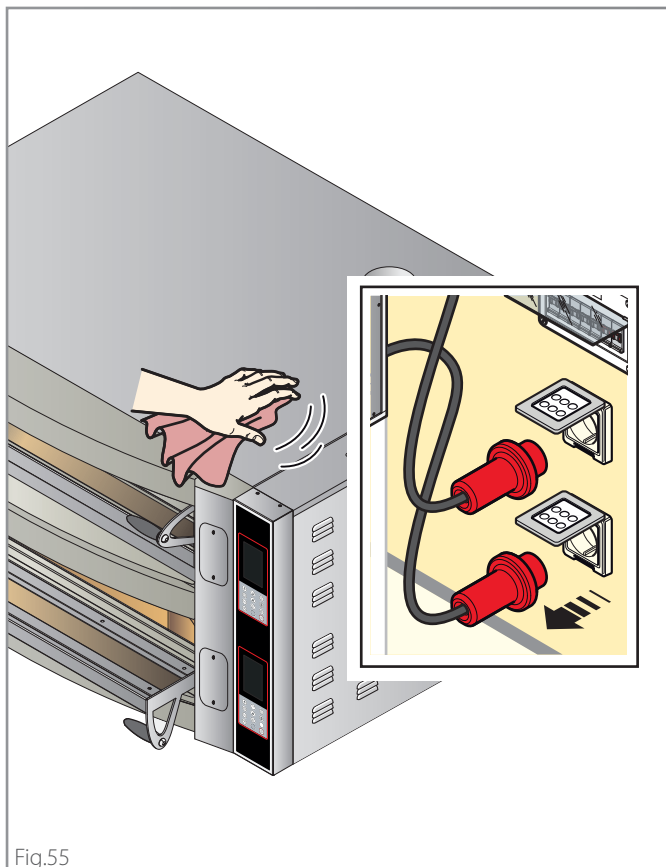


Fig.55



## Warranty conditions

- 8.1 Each product sold is to be considered compliant when delivered in the quantity, quality and type indicated in the written Confirmation, please refer to the provisions of art. 1.2.
- 8.2 The Seller guarantees:
  - (a) that the Products are free from defects in materials or workmanship, and
  - (b) that (excluding the case of known defects or which should have been known by the Buyer) the Products are of marketable quality.
- 8.3 Any hidden defects in the Products must be reported in writing by the Buyer within 8 days of discovery, under penalty of forfeiture. Packaging defects - even if they have caused defects or damage to the internal product - which had to be reported at the time of delivery, are excluded pursuant to art. 5.8.
- The defect report must contain the specific indication of the defective Products, a detailed description of the type of defect that the Product has, as well as the delivery date and that of discovery.
- The warranty is excluded if the defect derives from the Purchaser's actions such as, by way of example, incorrect installation of the Product, use of the Product in a manner that does not comply with the normal method of use, failure to comply with the instructions contained in the use and installation manual, tampering with the Product. The warranty does not cover normal wear and tear of the Product due to use.
- The Seller is responsible for defects that occur within one year from the activation of the warranty as provided for in point 8.12.
- 8.4 the Seller will have the right to examine, or have a representative examine, the Product and, if this shows the existence of the defect, the Buyer will be entitled to a repair or replacement, at the Seller's sole discretion.
- It is understood that, once the defect has been reported, the Buyer must not use the Product until it is viewed by the Seller or its representative. In the event that the Seller realizes that the Product has been used after the complaint, the Buyer loses the right to obtain a replacement or repair.
- 8.5 Replacement or repair will take place under the following terms:
  - a) The Seller may repair the defective Products by going - or sending a representative - to the place where such Products are located;
  - b) Alternatively, the Seller may repair the defective Product at its own factory, or other place chosen by the Seller,

- c) Alternatively, the Seller may opt for the replacement of the defective Products;
- In the event that the repair / replacement is not possible, the Seller will pay the Buyer a refund to be quantified, a refund which, however, must not exceed the price paid. Compensation for damage is excluded.
- 8.6. In case of repair of the Product at a place chosen by the Seller or in case of replacement of the defective Product, the shipment of the Product will be borne by the Buyer who must send it, at its own expense and risk, to the place stated by the Seller.
- 8.7 In no case will the Seller be liable for indirect or consequential damages and/or for loss of profits that the Buyer may suffer as a result of defects in the products such as (but not limited to) cancellation of orders by customers, penalties for delayed deliveries, penalties or refunds of any kind.
- 8.8 The Seller shall indemnify the Buyer from any liability or damage arising from defective Products, unless such liability derives from the Buyer's negligent acts or omissions or from the latter's non-fulfilment of its obligations.
- 8.9 The Seller is not liable for damage to persons and/or property that may derive from the improper use of the Products and/or from any use, processing or transformation of the Products that do not comply with their intended use and/or the instructions provided by the Seller. Save the hypothesis of gross negligence or wilful misconduct by the Seller.
- The Seller will also not be liable in the event of damage to property or injury to people or in the case of malfunction or damage or deterioration of the Product deriving from the fact that the Product has been connected to a non-compliant electrical system.
- 8.10 The Buyer will not be able to raise any claim for injury to people or damage to property other than those which are the subject of the contract, or for loss of profit, unless it results from the circumstances of the case that the Seller has committed "gross negligence".
- 8.11 "Gross negligence" does not include any and all lack of adequate care and expertise, but means an act or omission by the Seller which implies either a failure to take into consideration those serious consequences that a conscientious supplier would normally have foreseen as probably occurring, or a deliberate neglect of any consequence deriving from such act or omission.
- 8.12 The effect of the warranty referred to in this article is subject to its activation to be carried out through the website [www.cup-pone.com](http://www.cup-pone.com) within 48 hours after the time the Product is installed.

## Spare parts

- 9.1 For 10 years from delivery of the Product, the Seller undertakes, at the request of the Buyer, to assist him in identifying spare parts for product maintenance. In any case, the Seller is in no way responsible for the failure to identify such sources.

## Applicable law and multi-step clause

- 11.1 Italian law, as the Seller's law, will govern sales made on the basis of these General Conditions.
- 11.2 The Parties exclude the application of the Vienna Convention.
- 11.3 The parties will submit any disputes arising from sales made on the basis of these General Conditions to the conciliation attempt provided for by the Conciliation Service of the Milan Arbitration Chamber. In the event that the attempt fails, any disputes, even of a non-contractual nature, deriving from sales made on the basis of these General Conditions, will be resolved by arbitration according to the Rules of the Milan Arbitration Chamber, by a single arbitrator/three arbitrators, appointed in compliance with this Regulation. The Arbitration Tribunal will judge according to Italian law. The seat of the arbitration will be in Milan (Italy). The language of the arbitration will be Italian.

## 7 SOMETHING IS NOT WORKING...

### What to do in case of any malfunction

- Try and check the table on this page. If none of the proposed solutions solves the problem, continue reading the following procedure.
- Check if there are any alarm messages on the display; in fact, if the system detects a problem, a pop-up notification appears. Alarms are malfunctions that completely or partially preclude the use of the oven until they are reset; it is therefore necessary to contact the Dealer for repair. The problems detected, as well as in the pop-up notification, are also highlighted in the "Alarm Log" screen. (see ► **Fig.44 - Alarm log menu**)

Message .....

- Note the oven data (rating plate) and the date and number of the appliance purchase invoice.

Serial number.....

Model.....

Invoice date.....

Invoice number .....

- Read the chapter on warranty carefully.



**Warranty conditions** - page **41**.

- Contact the Dealer with the details of the oven. While waiting for Technical service, disconnect the appliance from the mains.

CUPPONE since 1963  
CUPPONE S.R.L.  
Via Sile, 36  
31057 Silea (TV) - ITALY

T +39 0422 361143

F +39 0422 360993

info@cuppone.com - www.cuppone.com

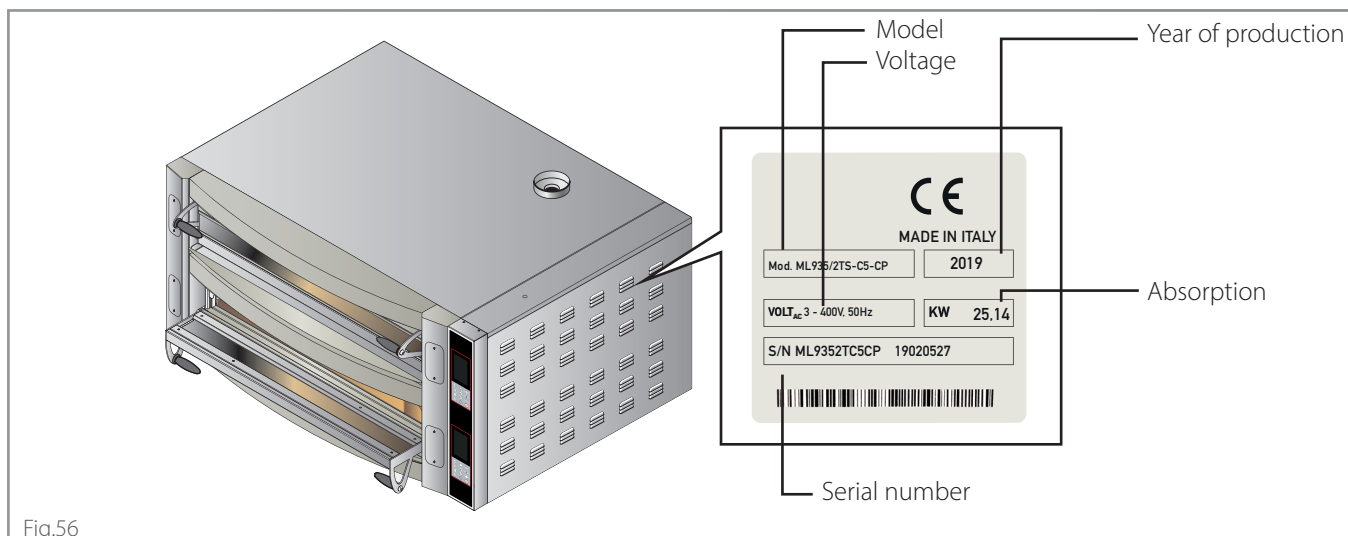


Fig.56

Problem	Solution	
The oven does not turn on	<ul style="list-style-type: none"> <li>• Make sure the oven is correctly connected to the mains (plug correctly inserted into the socket) and that the mains are working.</li> <li>• Make sure the main switch is ON.</li> </ul>	
The oven turns on but cooking does not start	<ul style="list-style-type: none"> <li>• Make sure you set the cooking parameters correctly.</li> </ul>	Setting the cooking parameters: see page <b>7</b>
The oven does not cook evenly	<ul style="list-style-type: none"> <li>• Make sure you set the cooking parameters correctly.</li> <li>• In case of incomplete baking cycles, change the positions of the pizzas.</li> </ul>	
The first pizzas are burnt	<ul style="list-style-type: none"> <li>• In preheating, the percentage (mod. TS) / setting (mod. CD) of the BOTTOM has been set too high: the refractory surfaces (without pizzas) have become too hot and burnt the first pizzas.</li> </ul>	
Products not very brown on the surface	<ul style="list-style-type: none"> <li>• In the back of the cooking chamber, there are some steam holes that must be opened or closed according to the type of product to cook: for instance, if they are not opened, there may be too much humidity in the chamber that prevents the infrared rays of the top elements from browning the surface of the products.</li> </ul>	Opening/closing of the steam holes: refer to page <b>11</b> and page <b>19</b>
Excessive humidity is coming out of the oven door	<ul style="list-style-type: none"> <li>• The products baked normally release humidity: if the steam holes are not opened correctly, the steam gets out from the door.</li> </ul>	





CUPPONE since 1963

CUPPONE S.R.L.

Via Sile, 36

31057 Silea (TV) - ITALY

T +39 0422 361143

F +39 0422 360993

info@cuppone.com - [www.cuppone.com](http://www.cuppone.com)

